

FIGURE 1

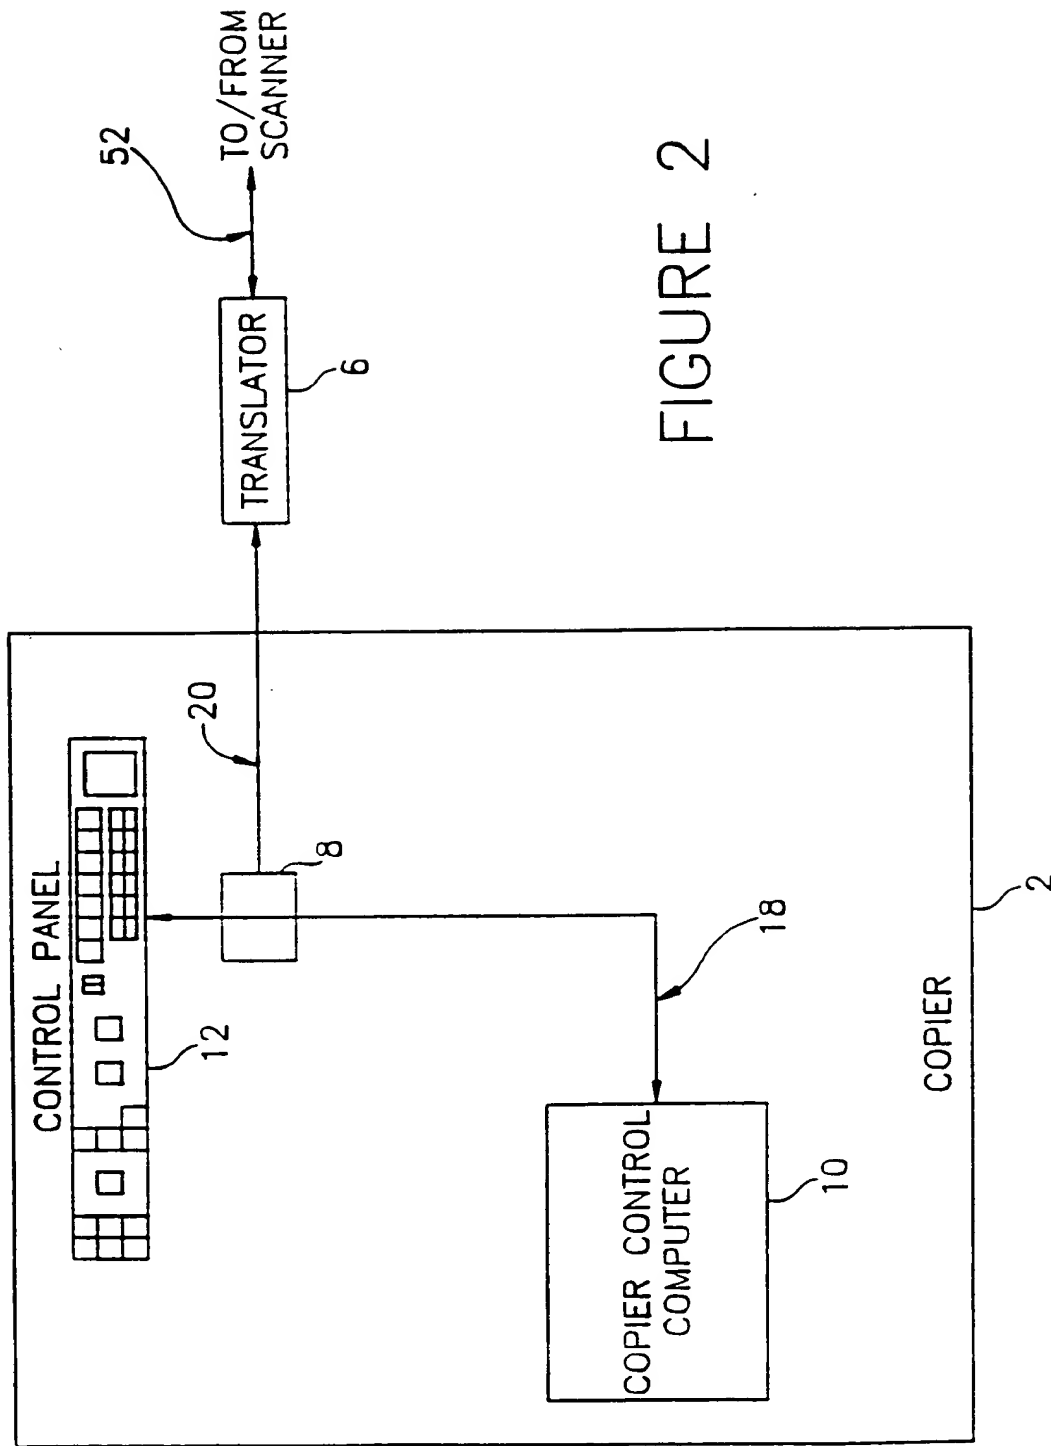 


FIGURE 2

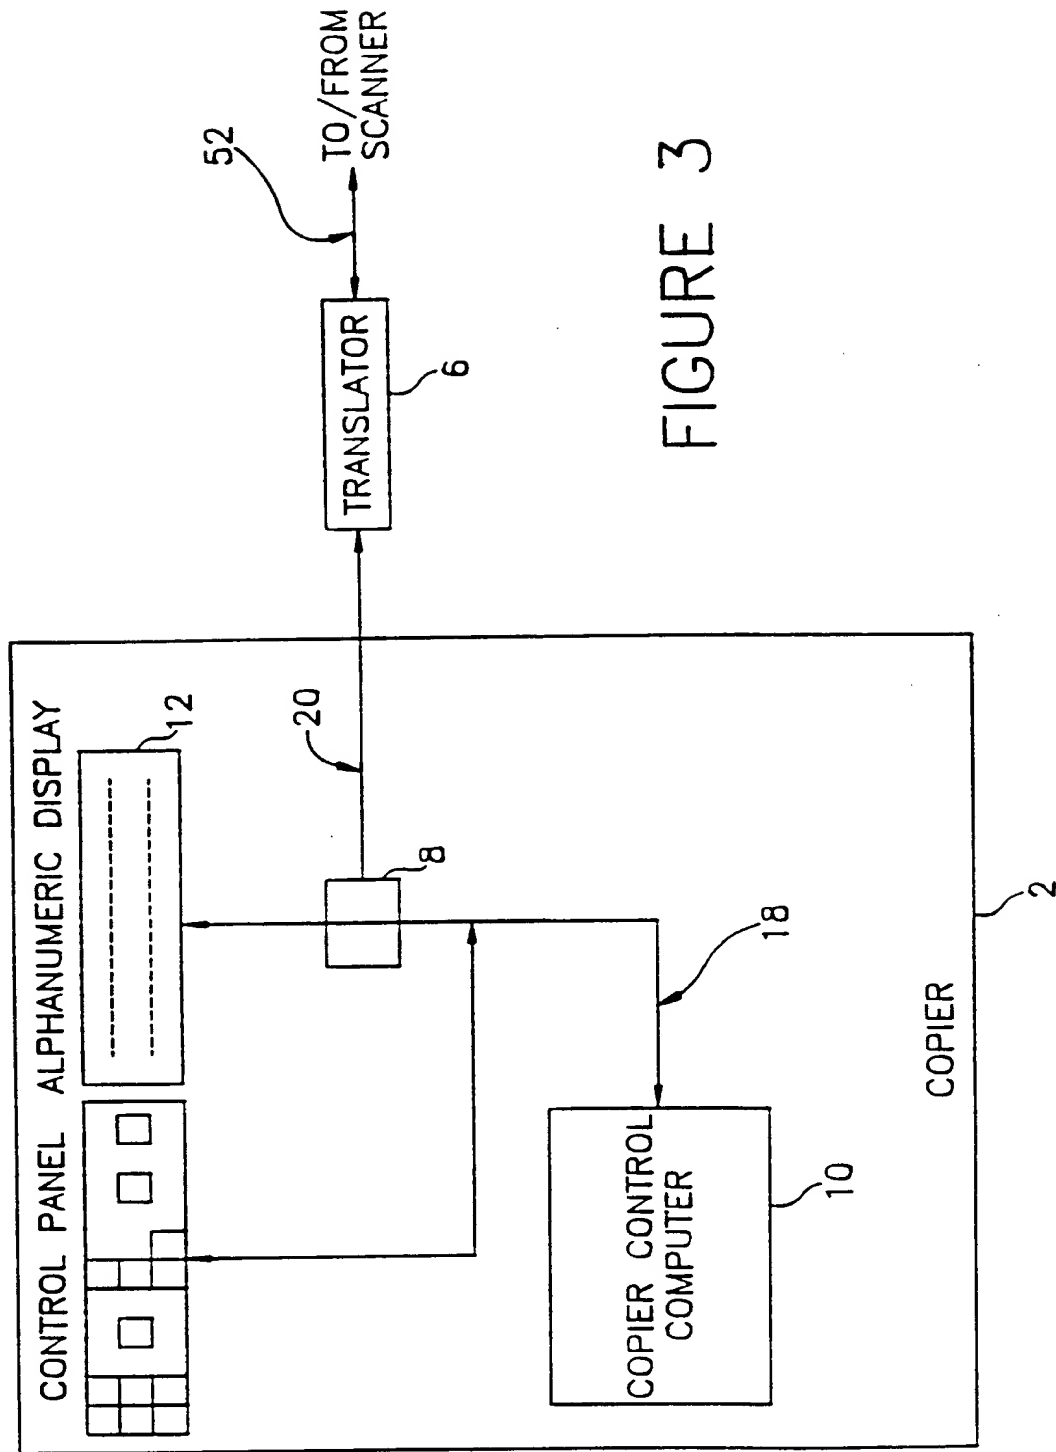 


FIGURE 3

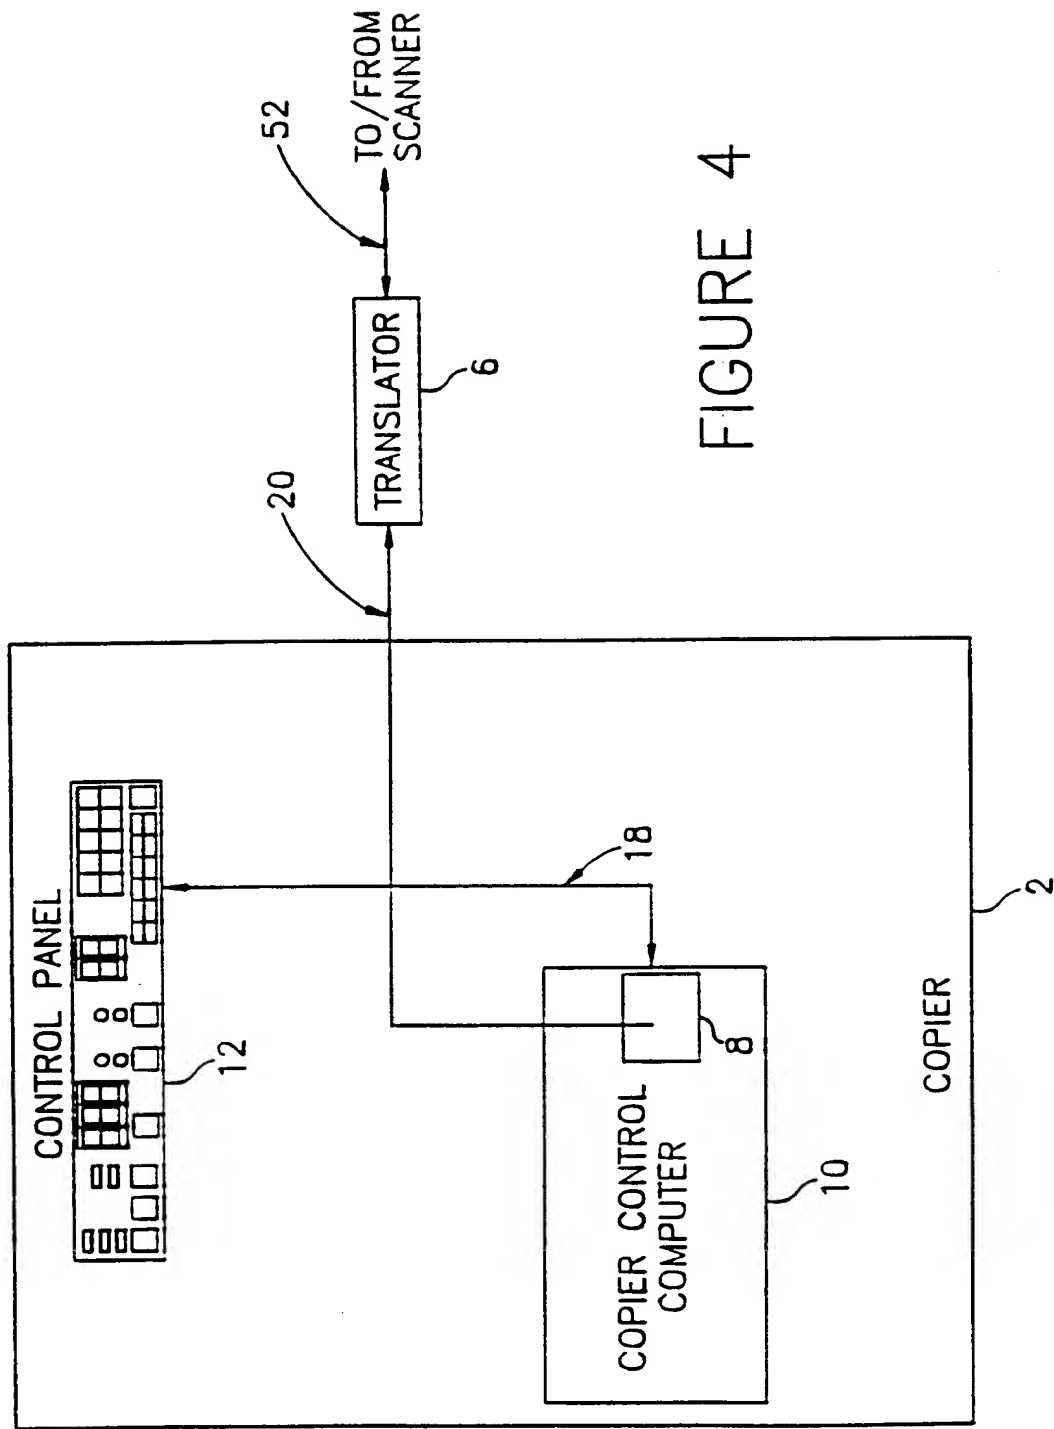 


FIGURE 4

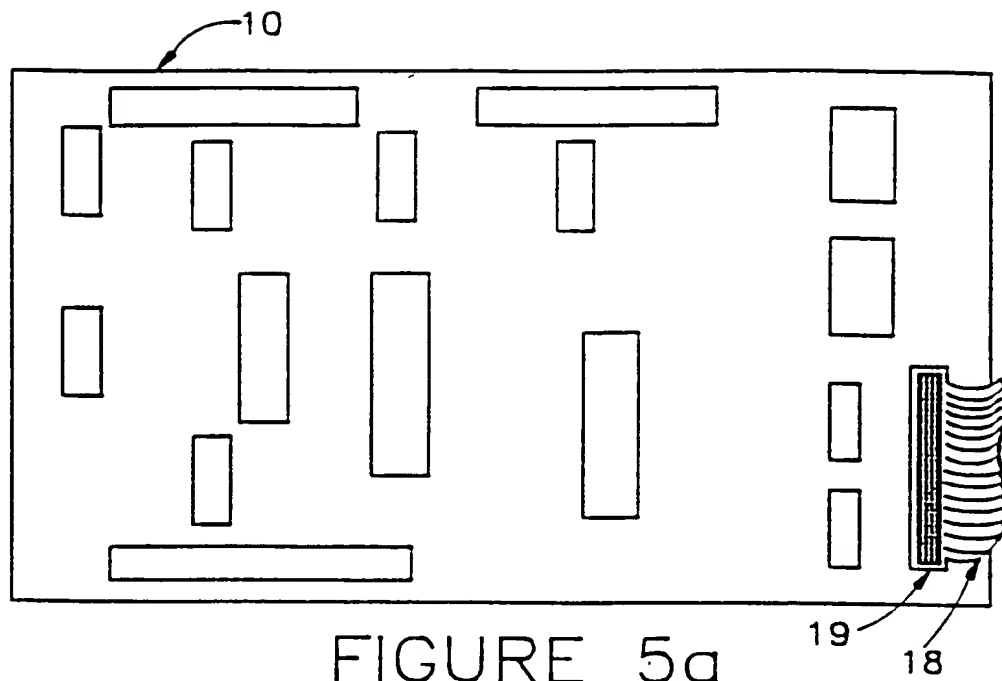 


FIGURE 5a

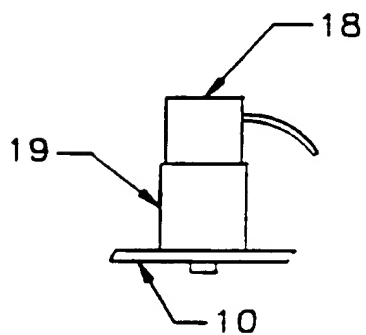 


FIGURE 5b

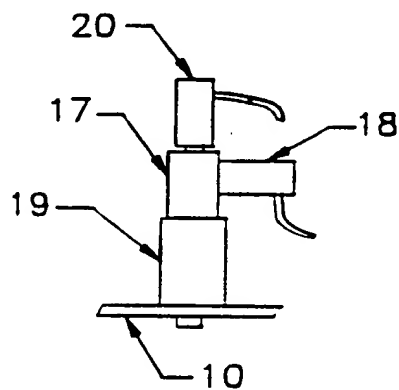 


FIGURE 5c

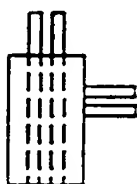 


FIGURE 5d

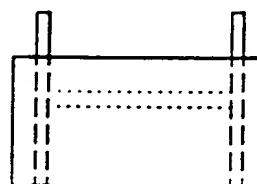 


FIGURE 5e

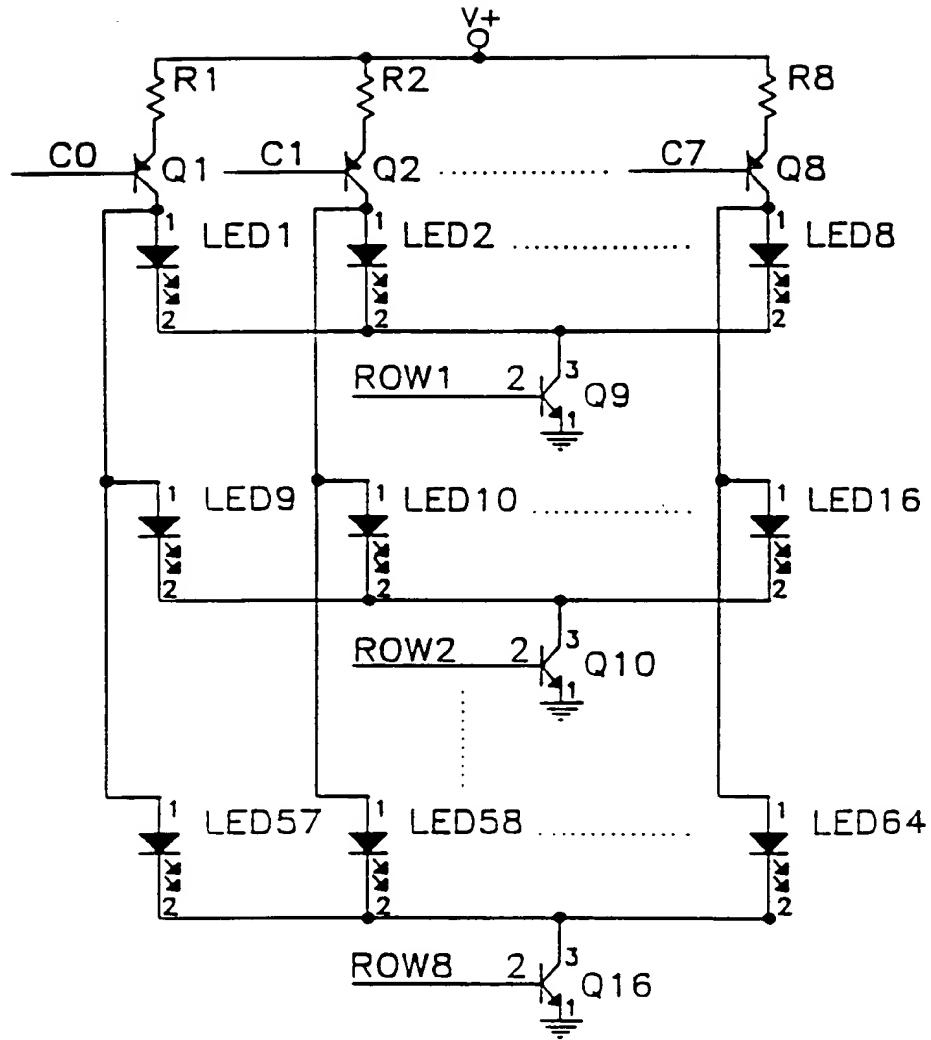
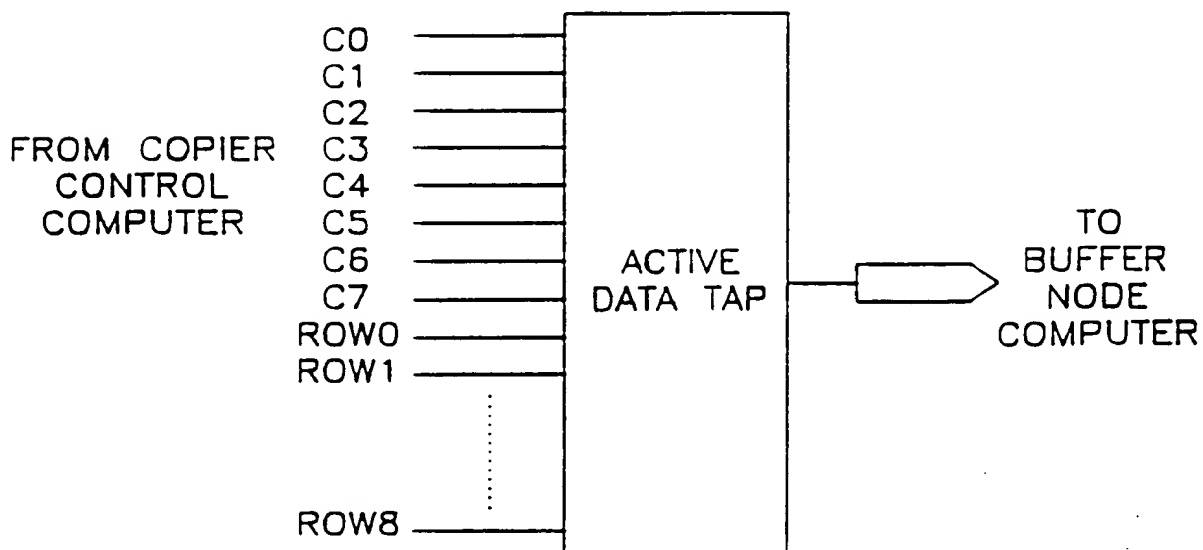 
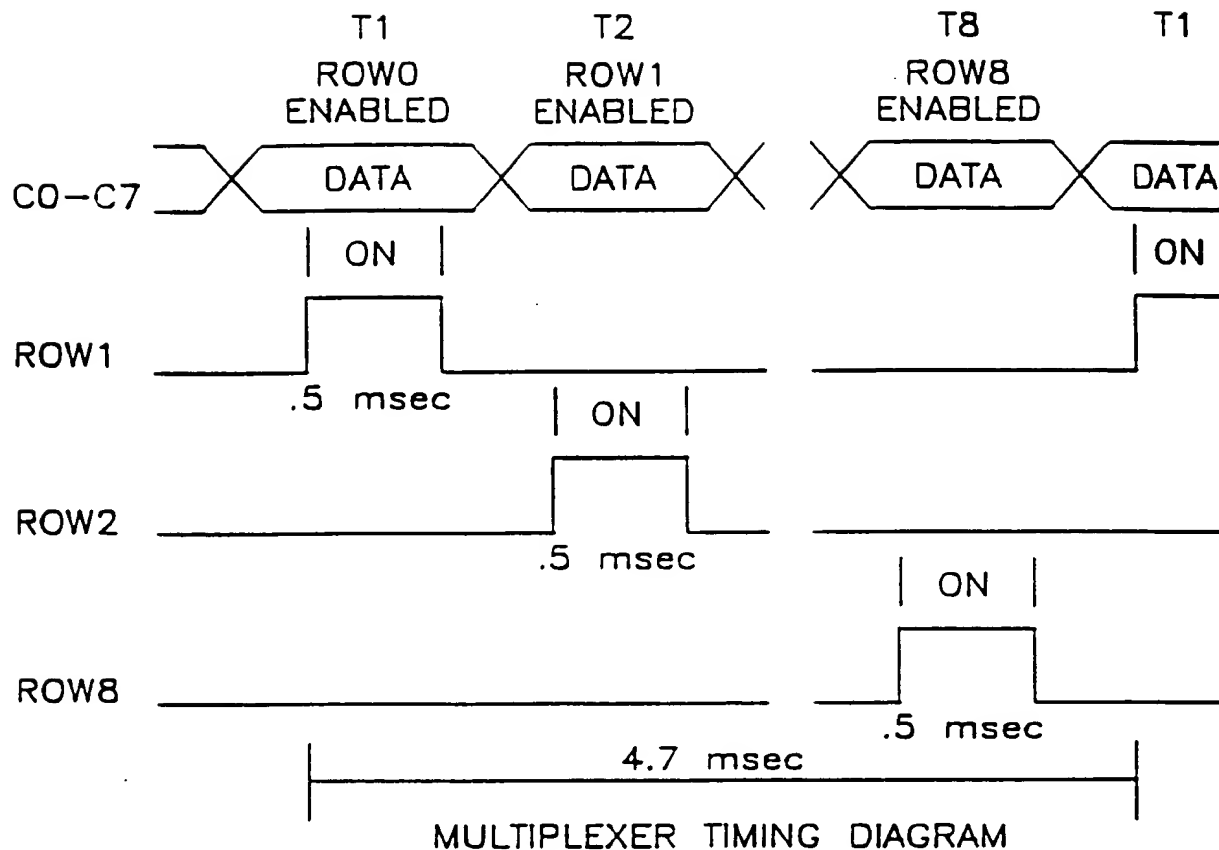 


FIGURE 6a

09902065-100901

 

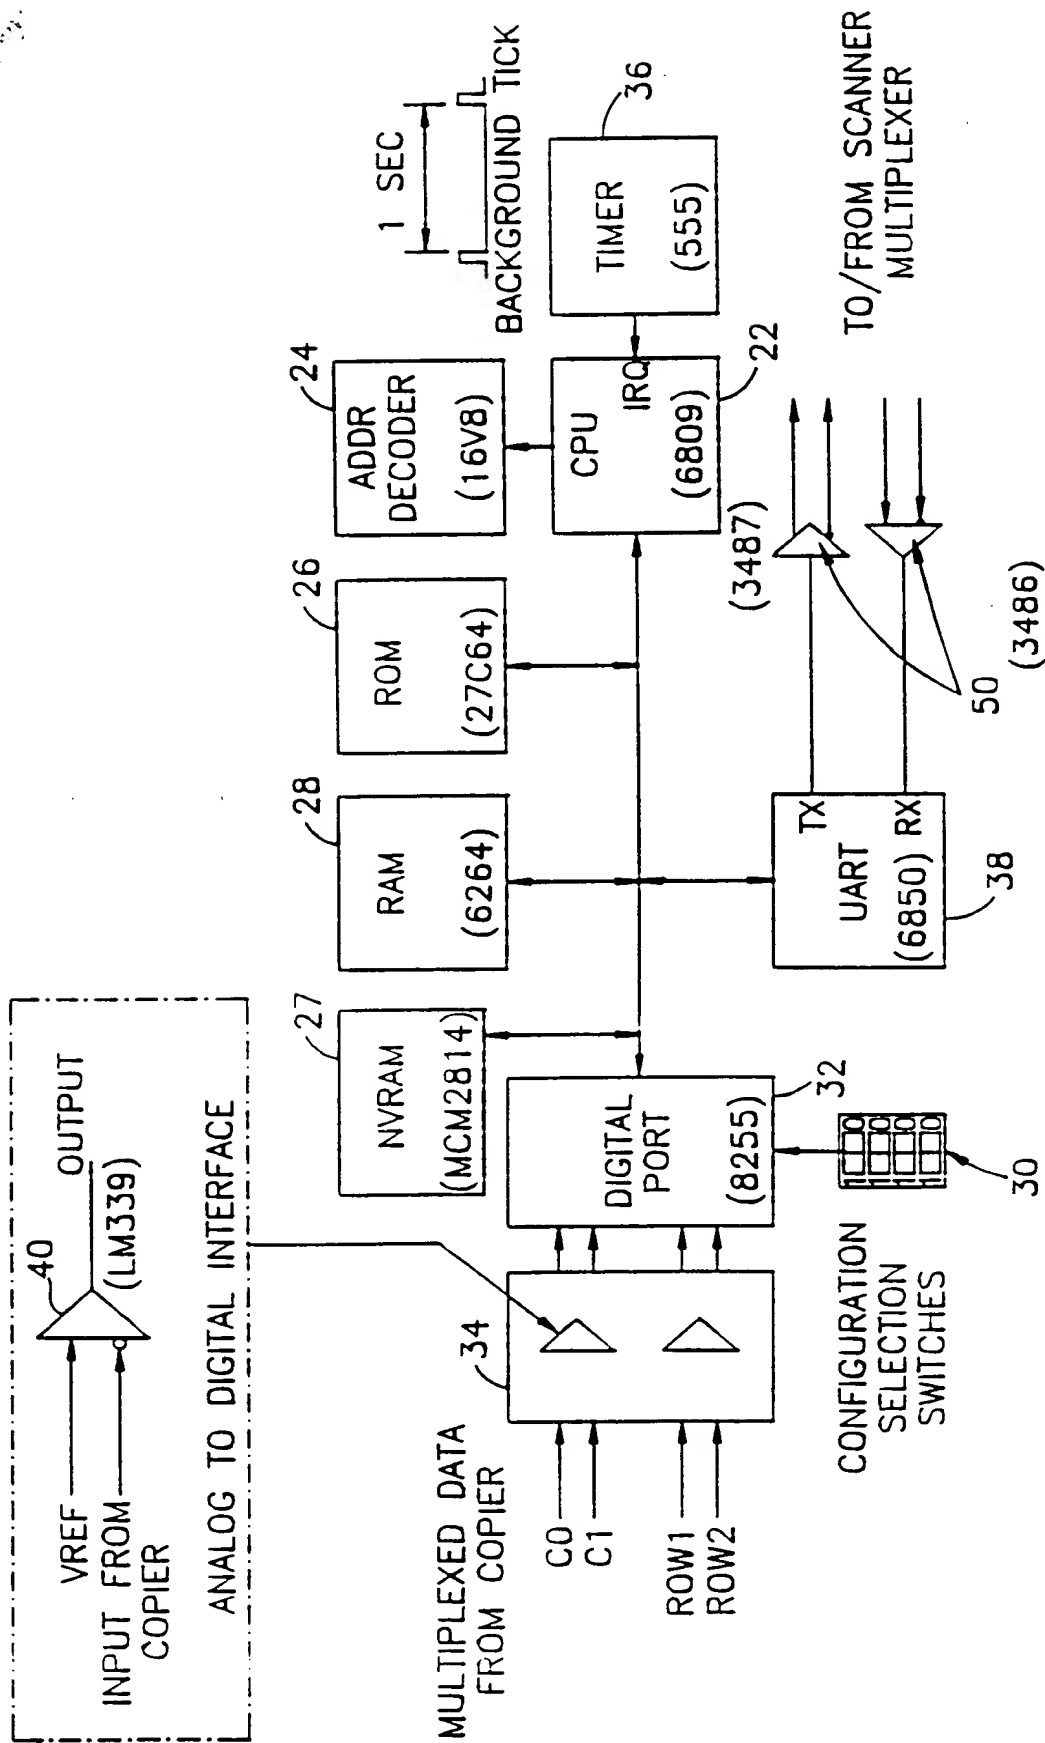 


FIGURE 7

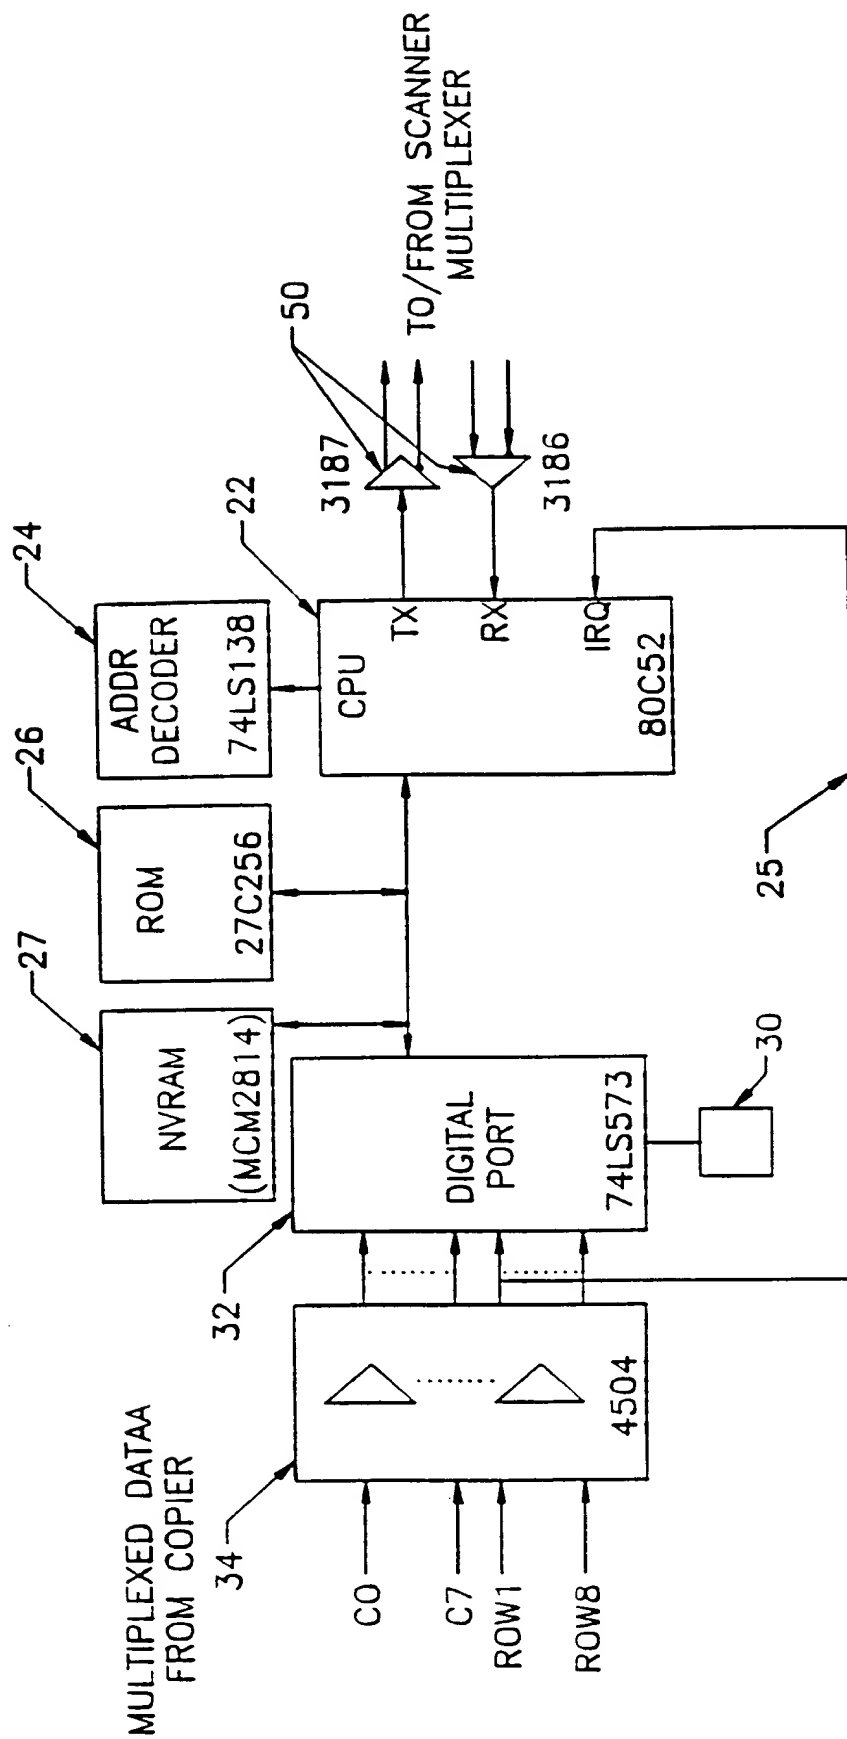 


FIGURE 8

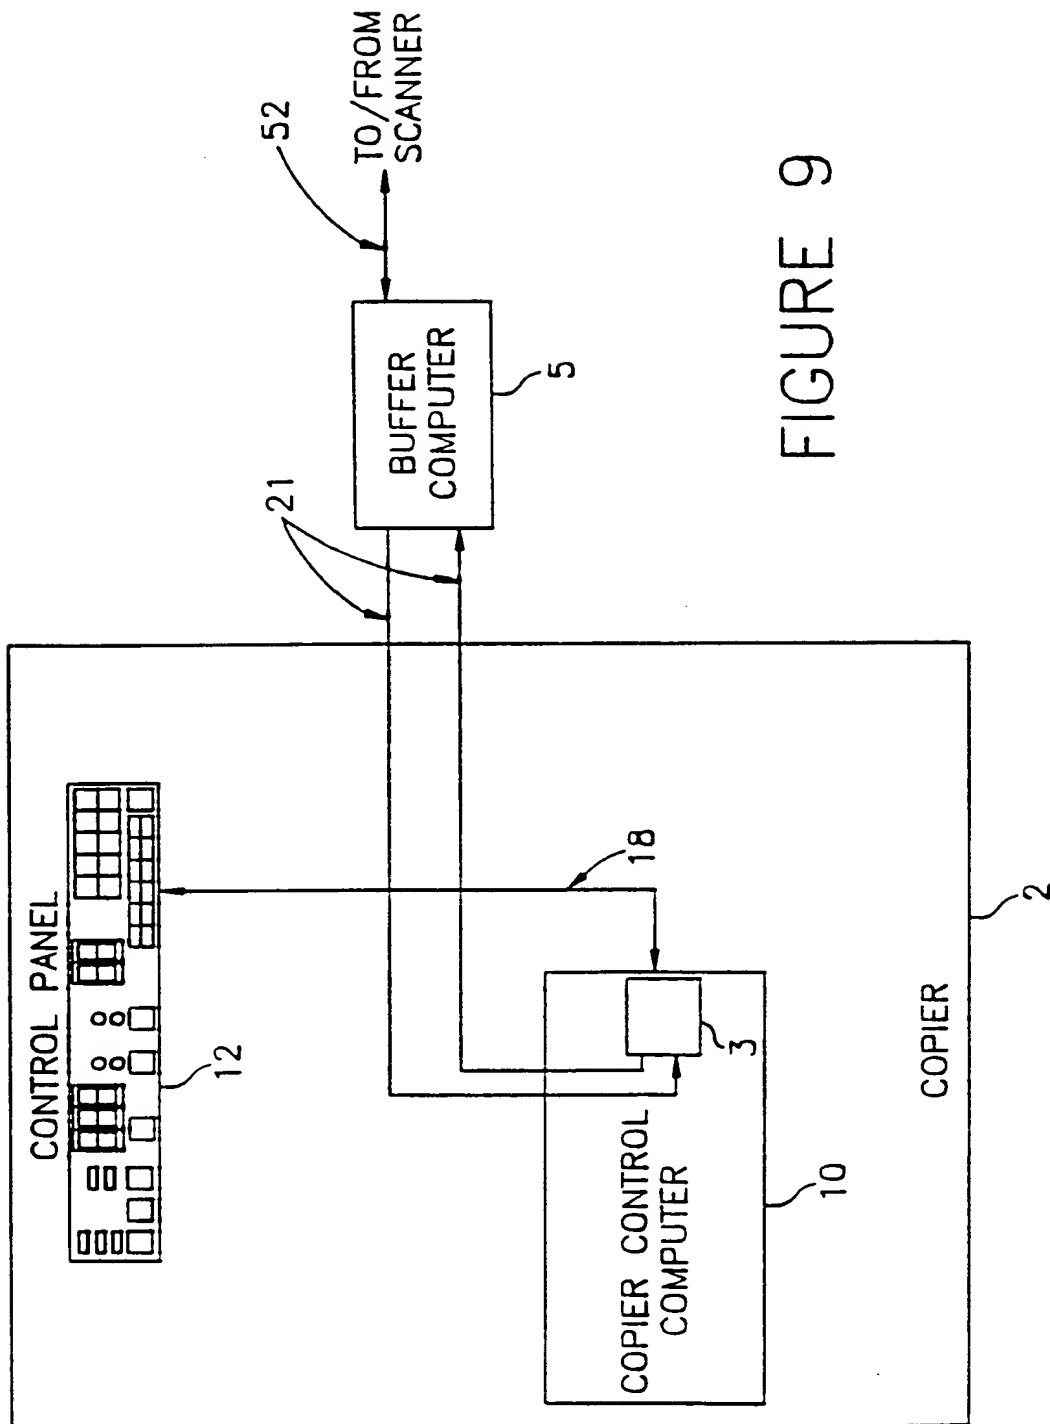 


FIGURE 9

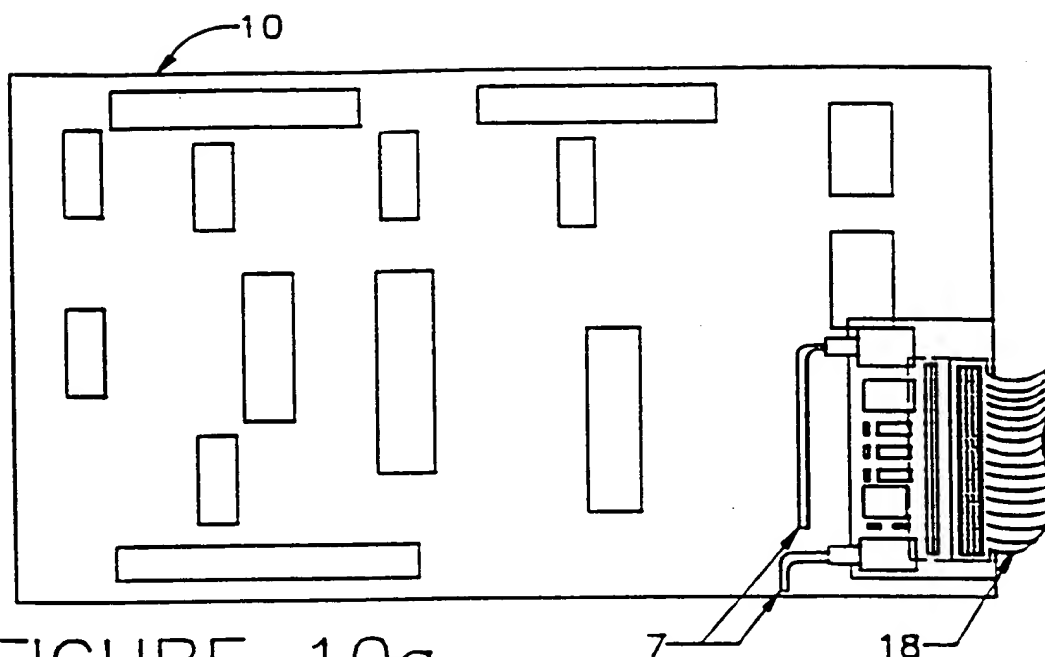 


FIGURE 10a

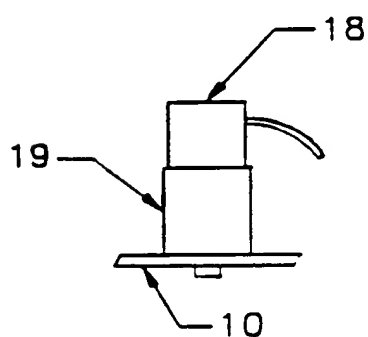 


FIGURE 10b

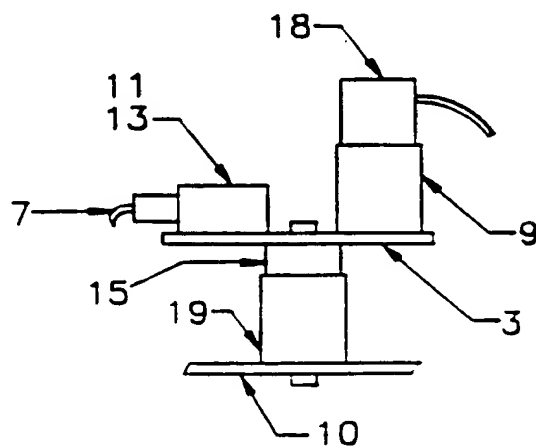 


FIGURE 10c

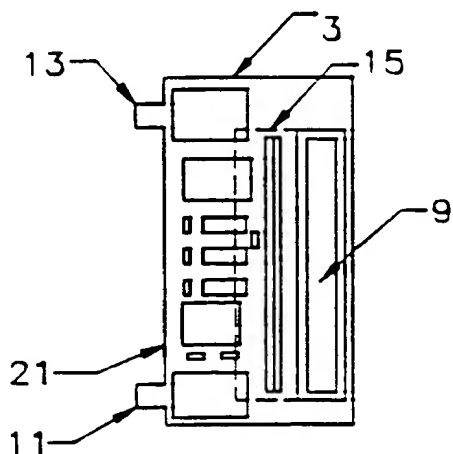 


FIGURE 10d

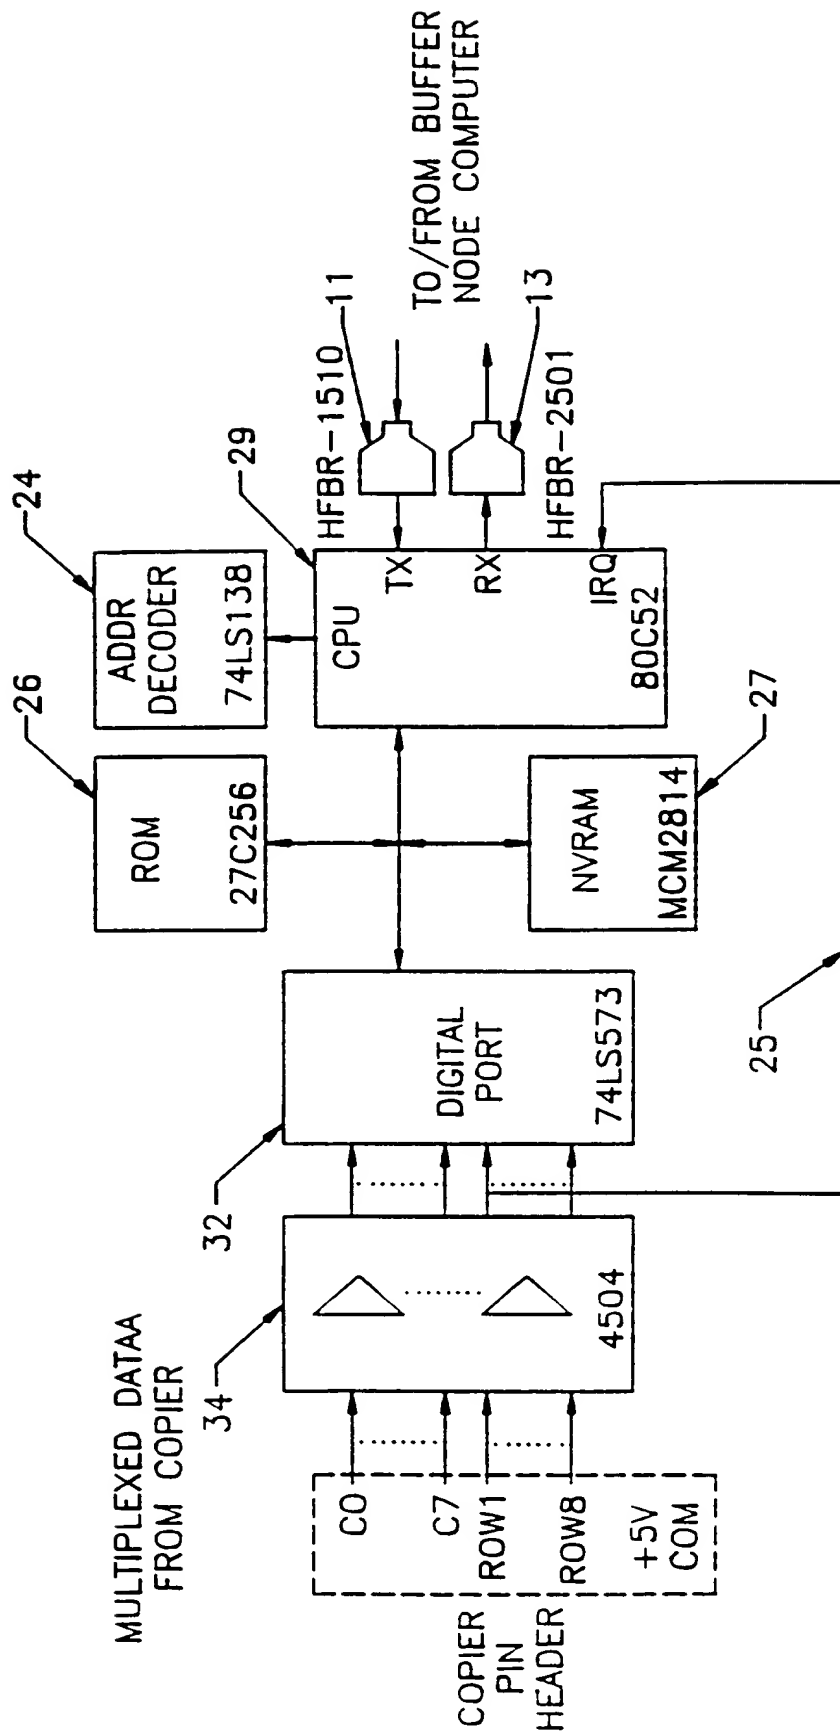 


FIGURE 11

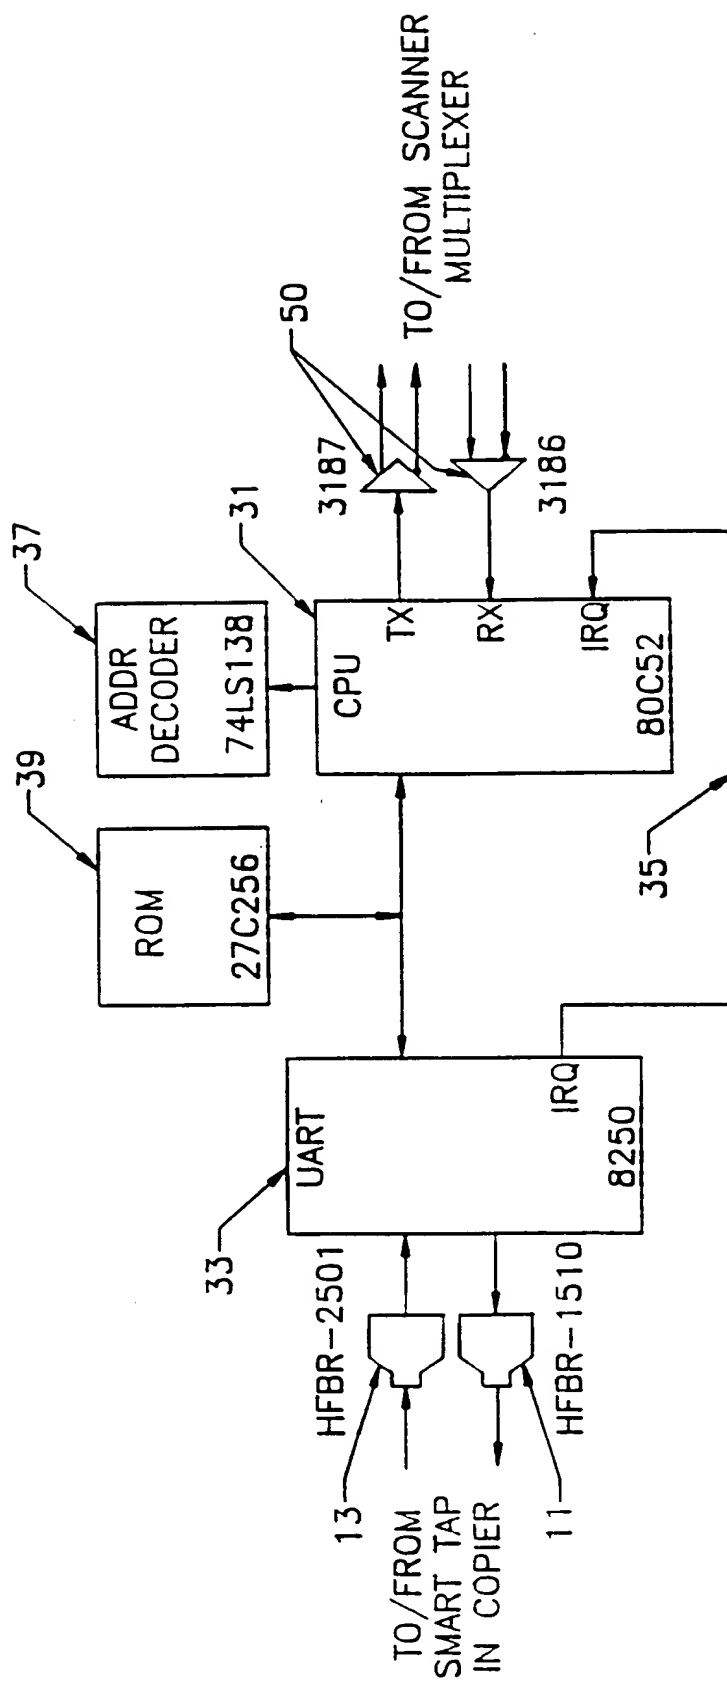 


FIGURE 12

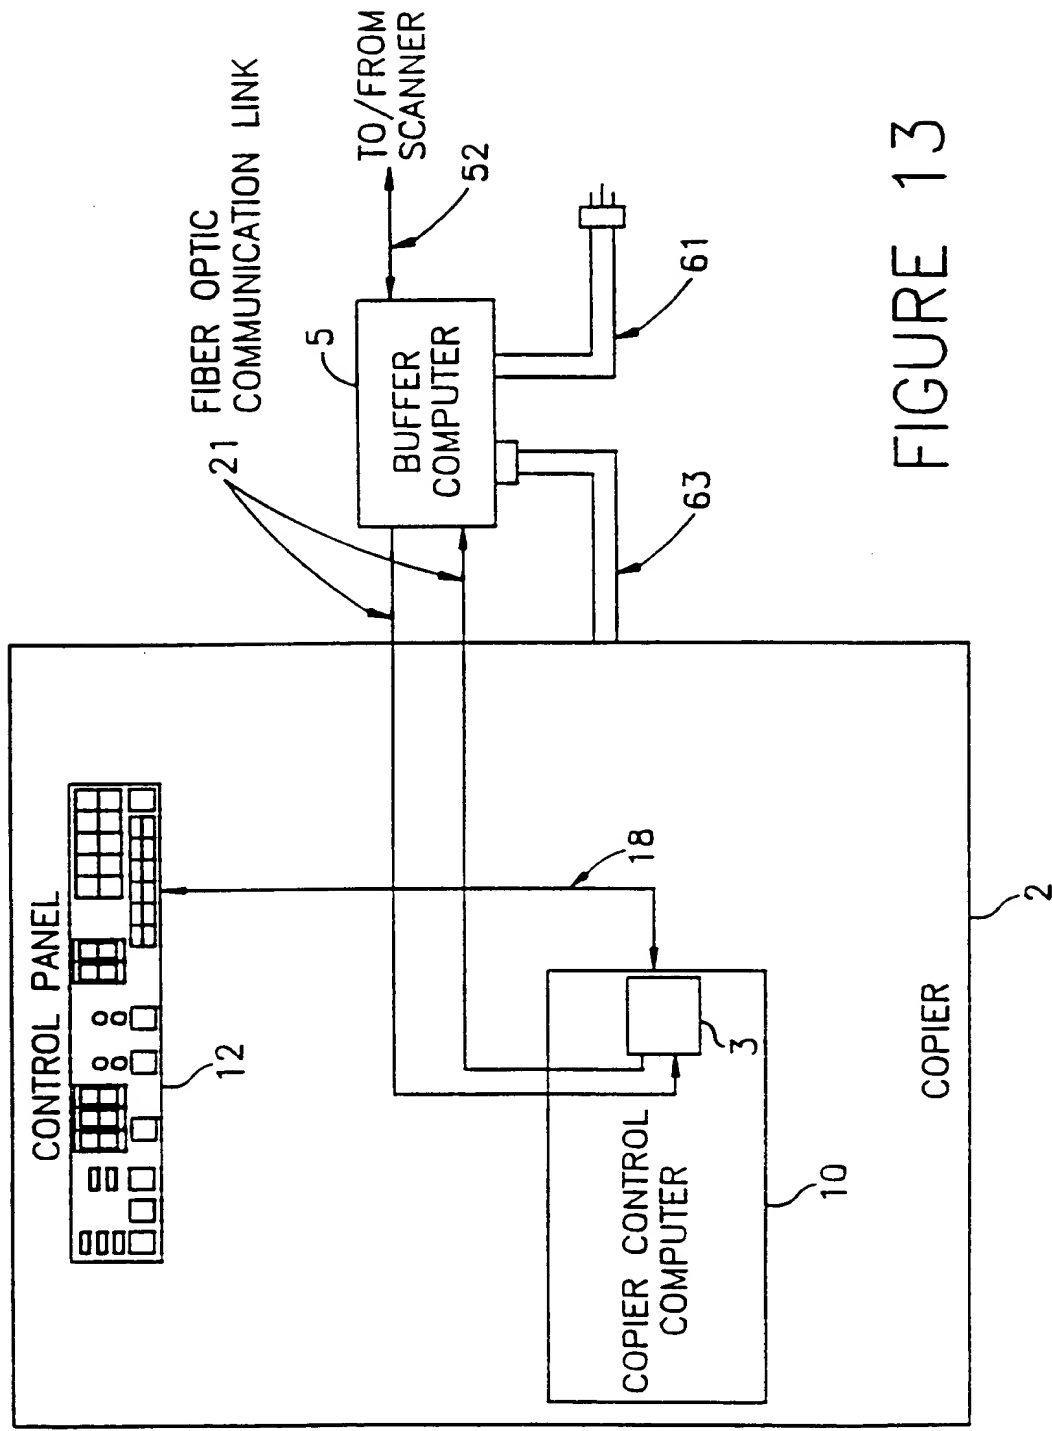 


FIGURE 13

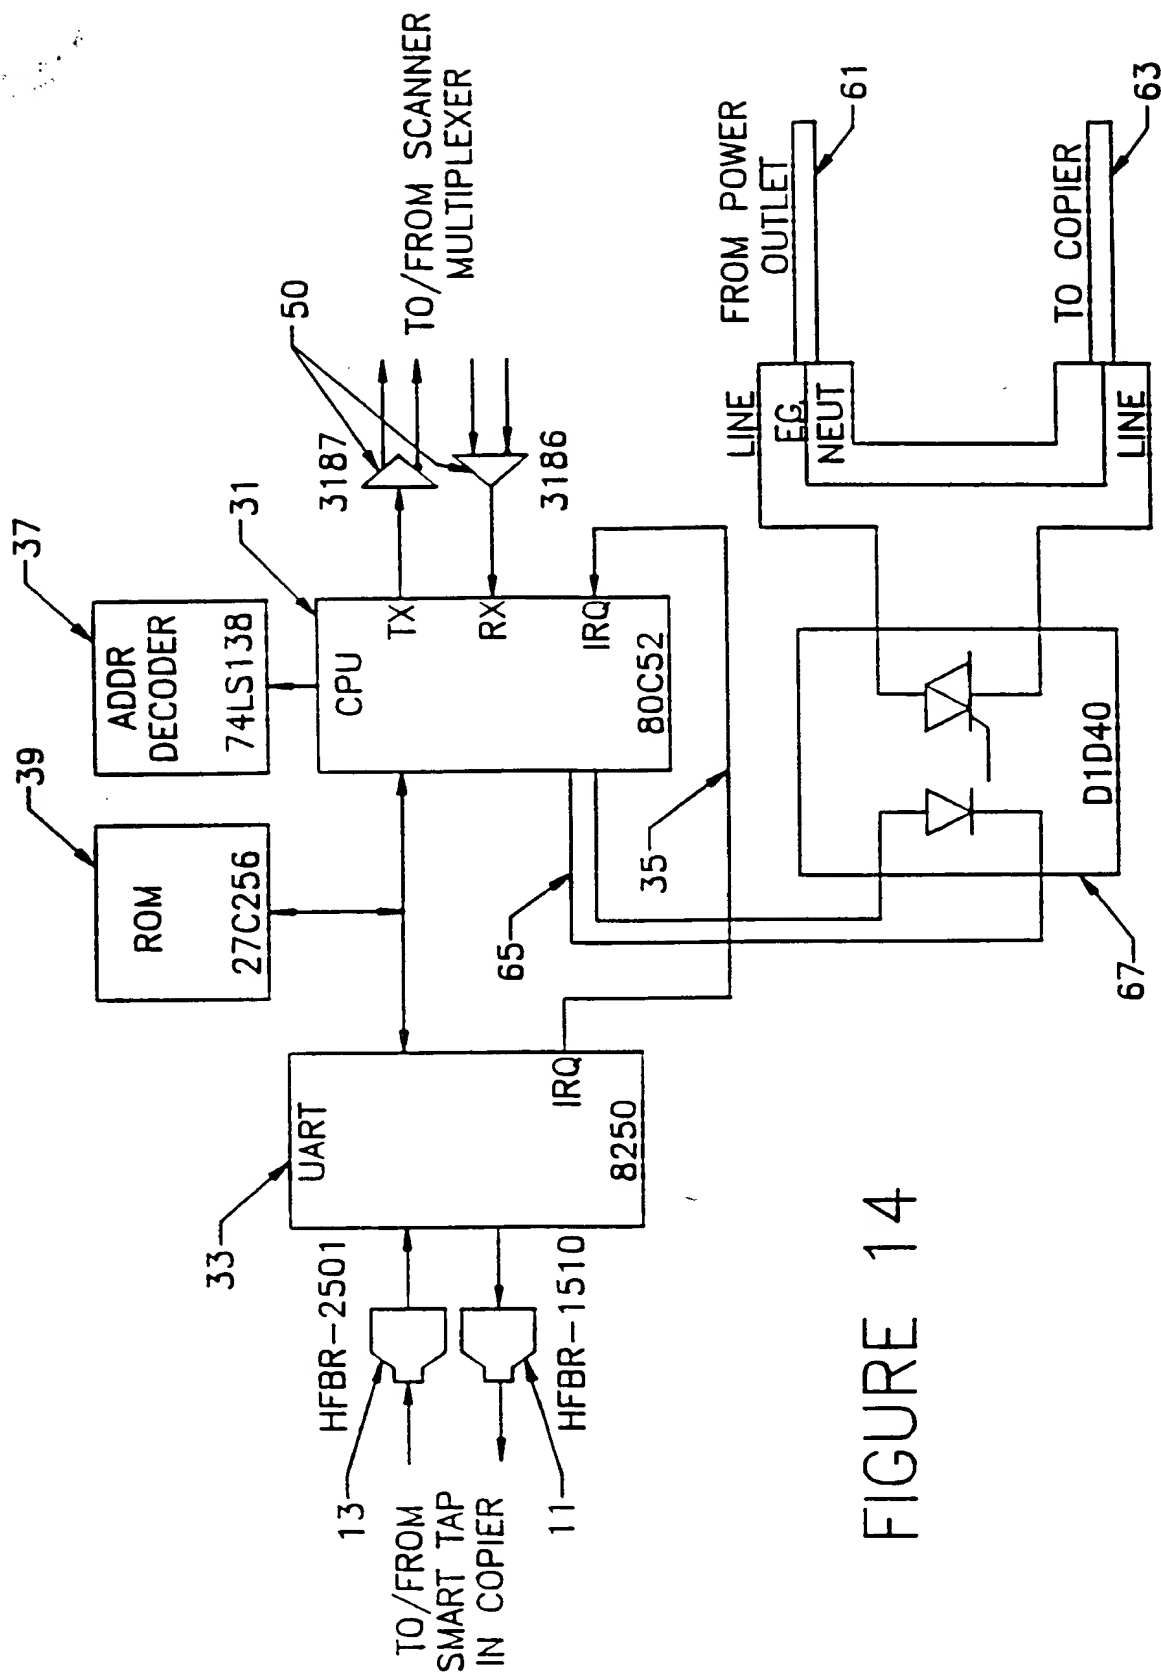 


FIGURE 14


 
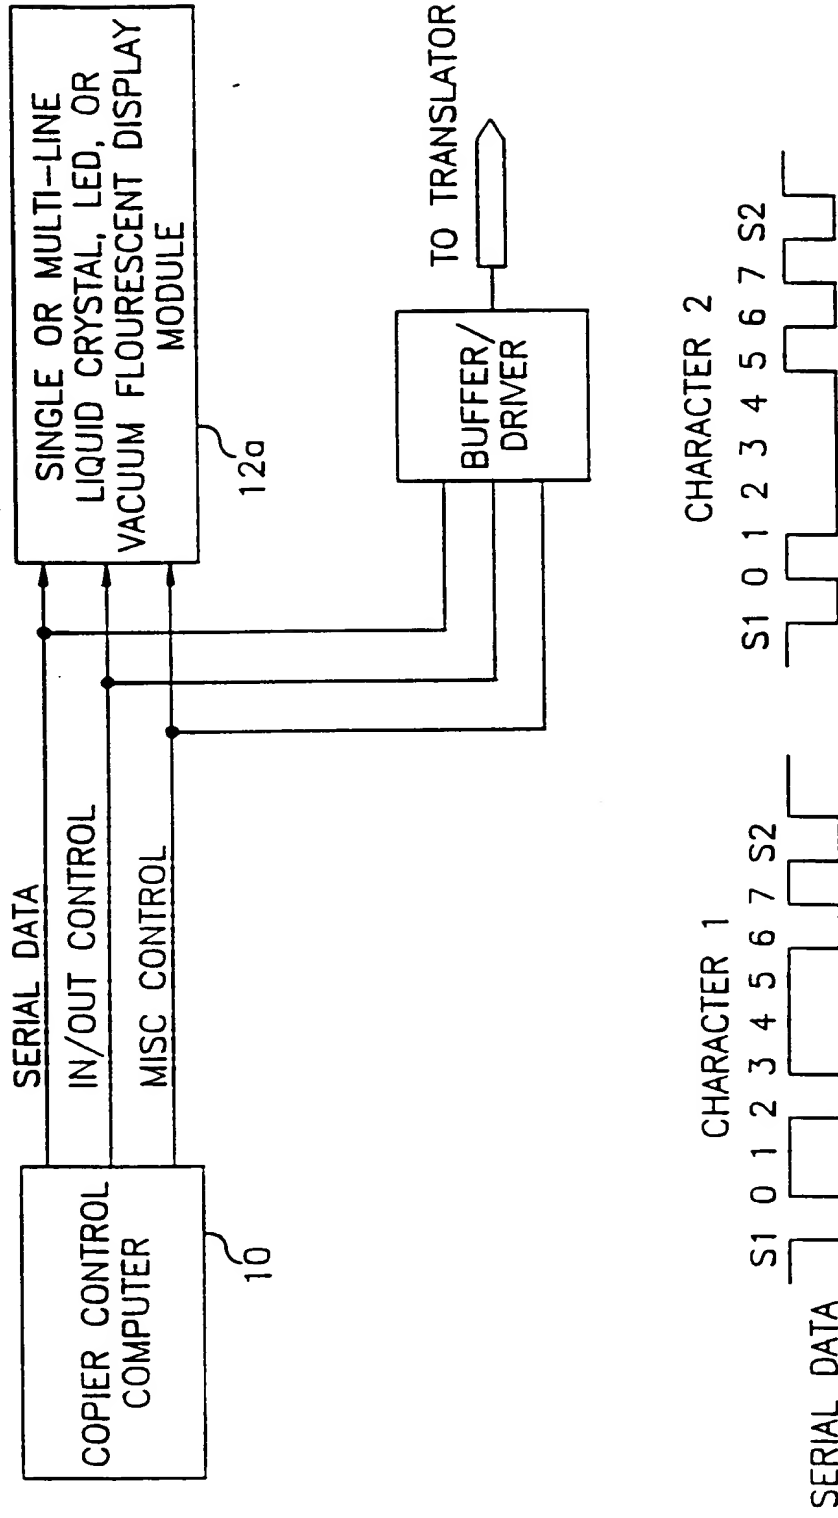 


FIGURE 15

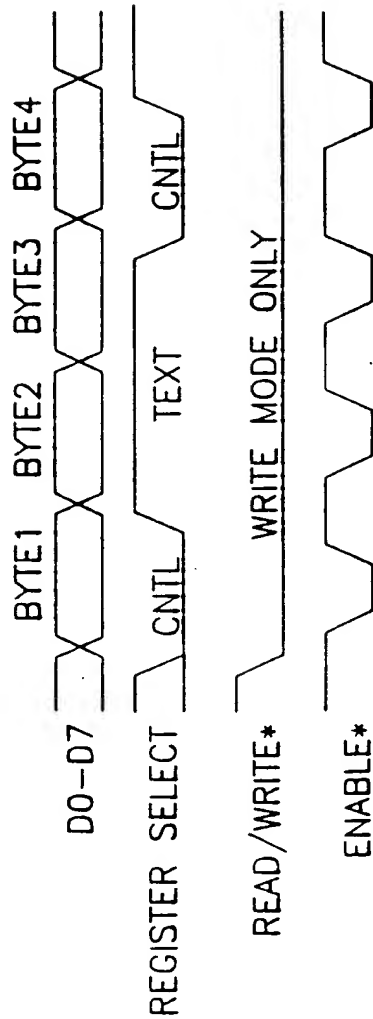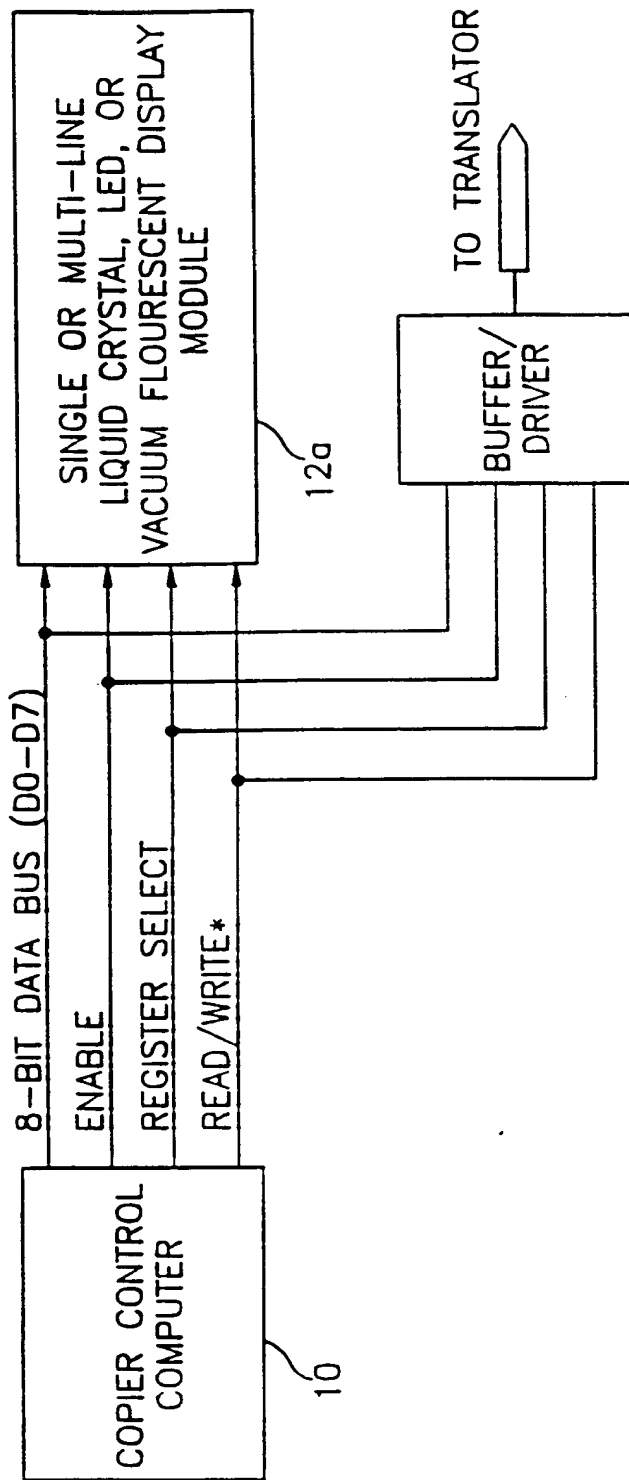 

DISPLAY ACCESS TIMING DIAGRAM

FIGURE 16

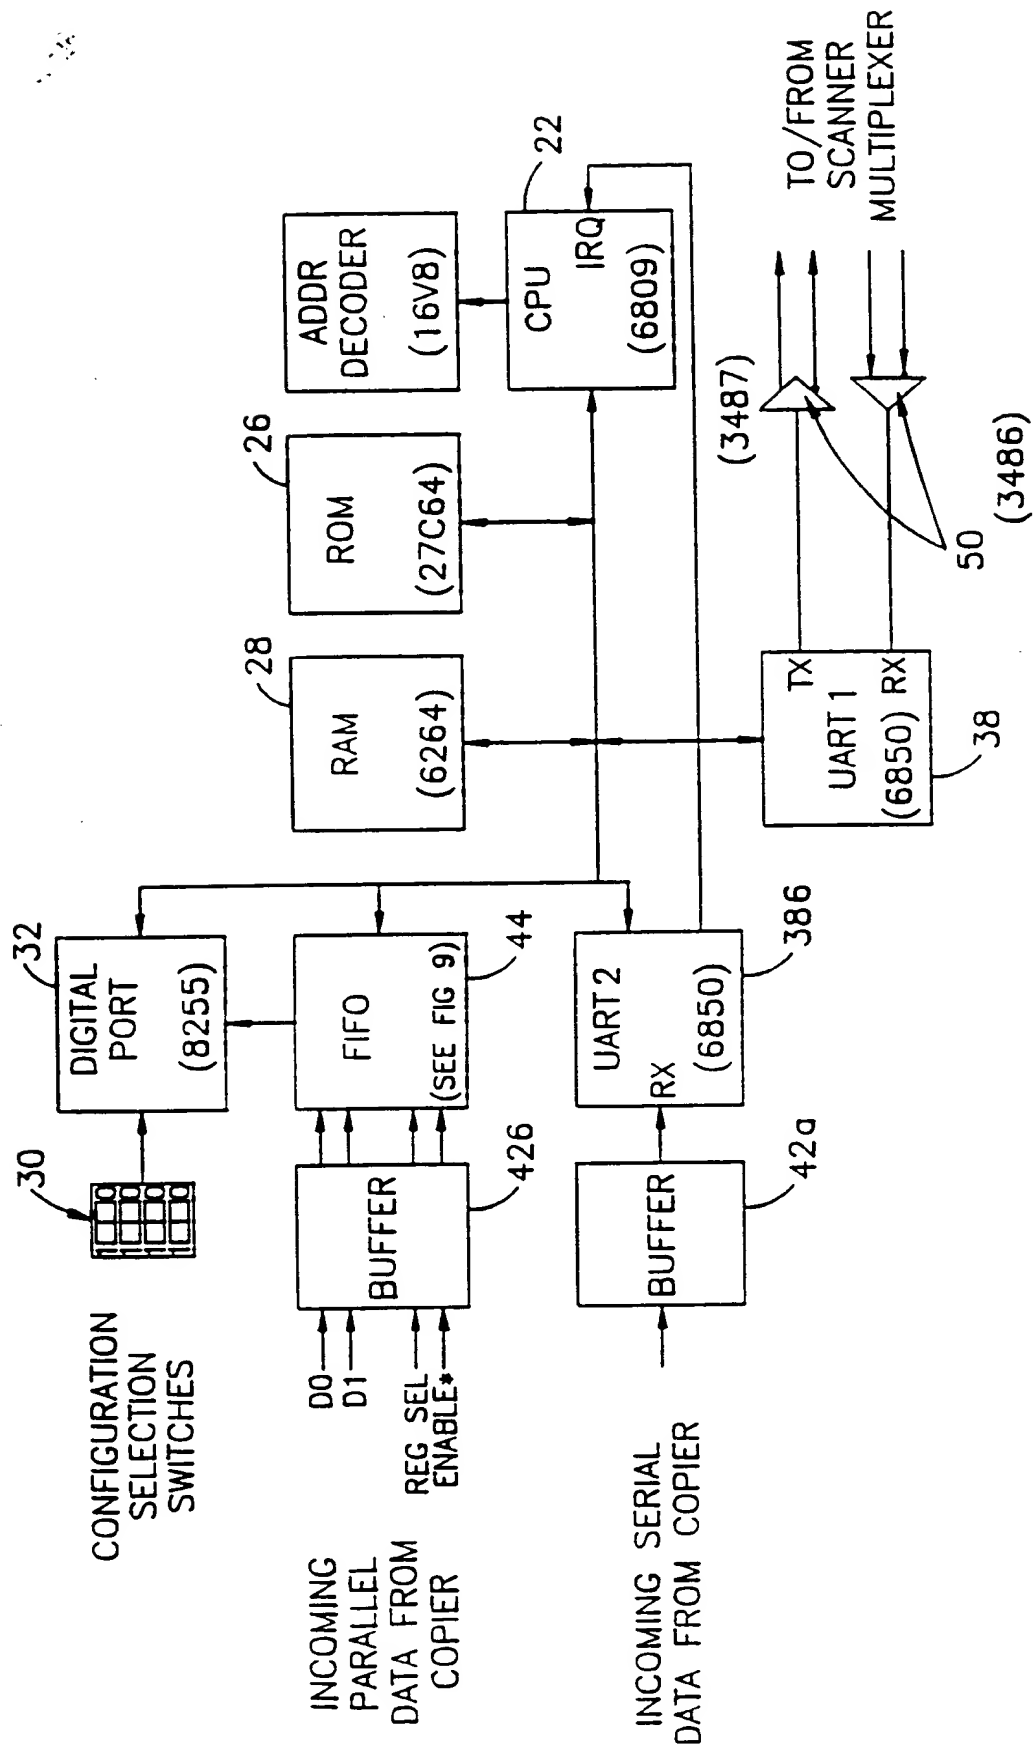 


FIGURE 17

09902066-100901



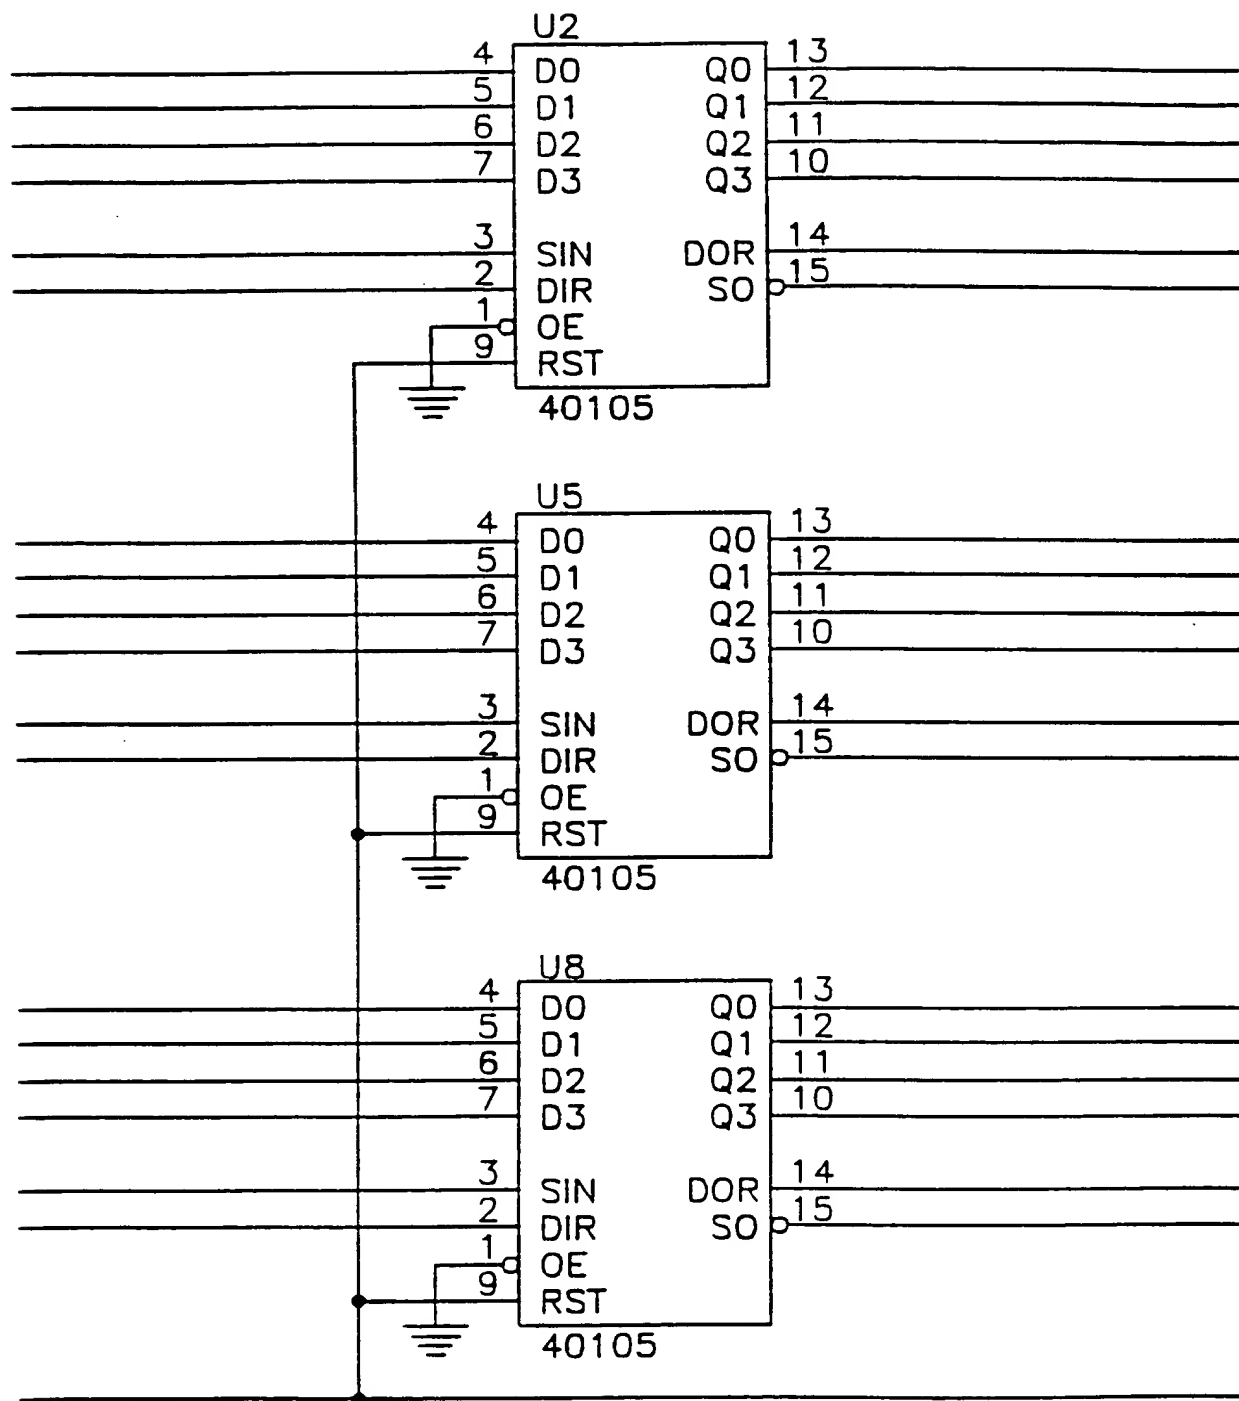 


FIGURE 18a

 

09902065-100901

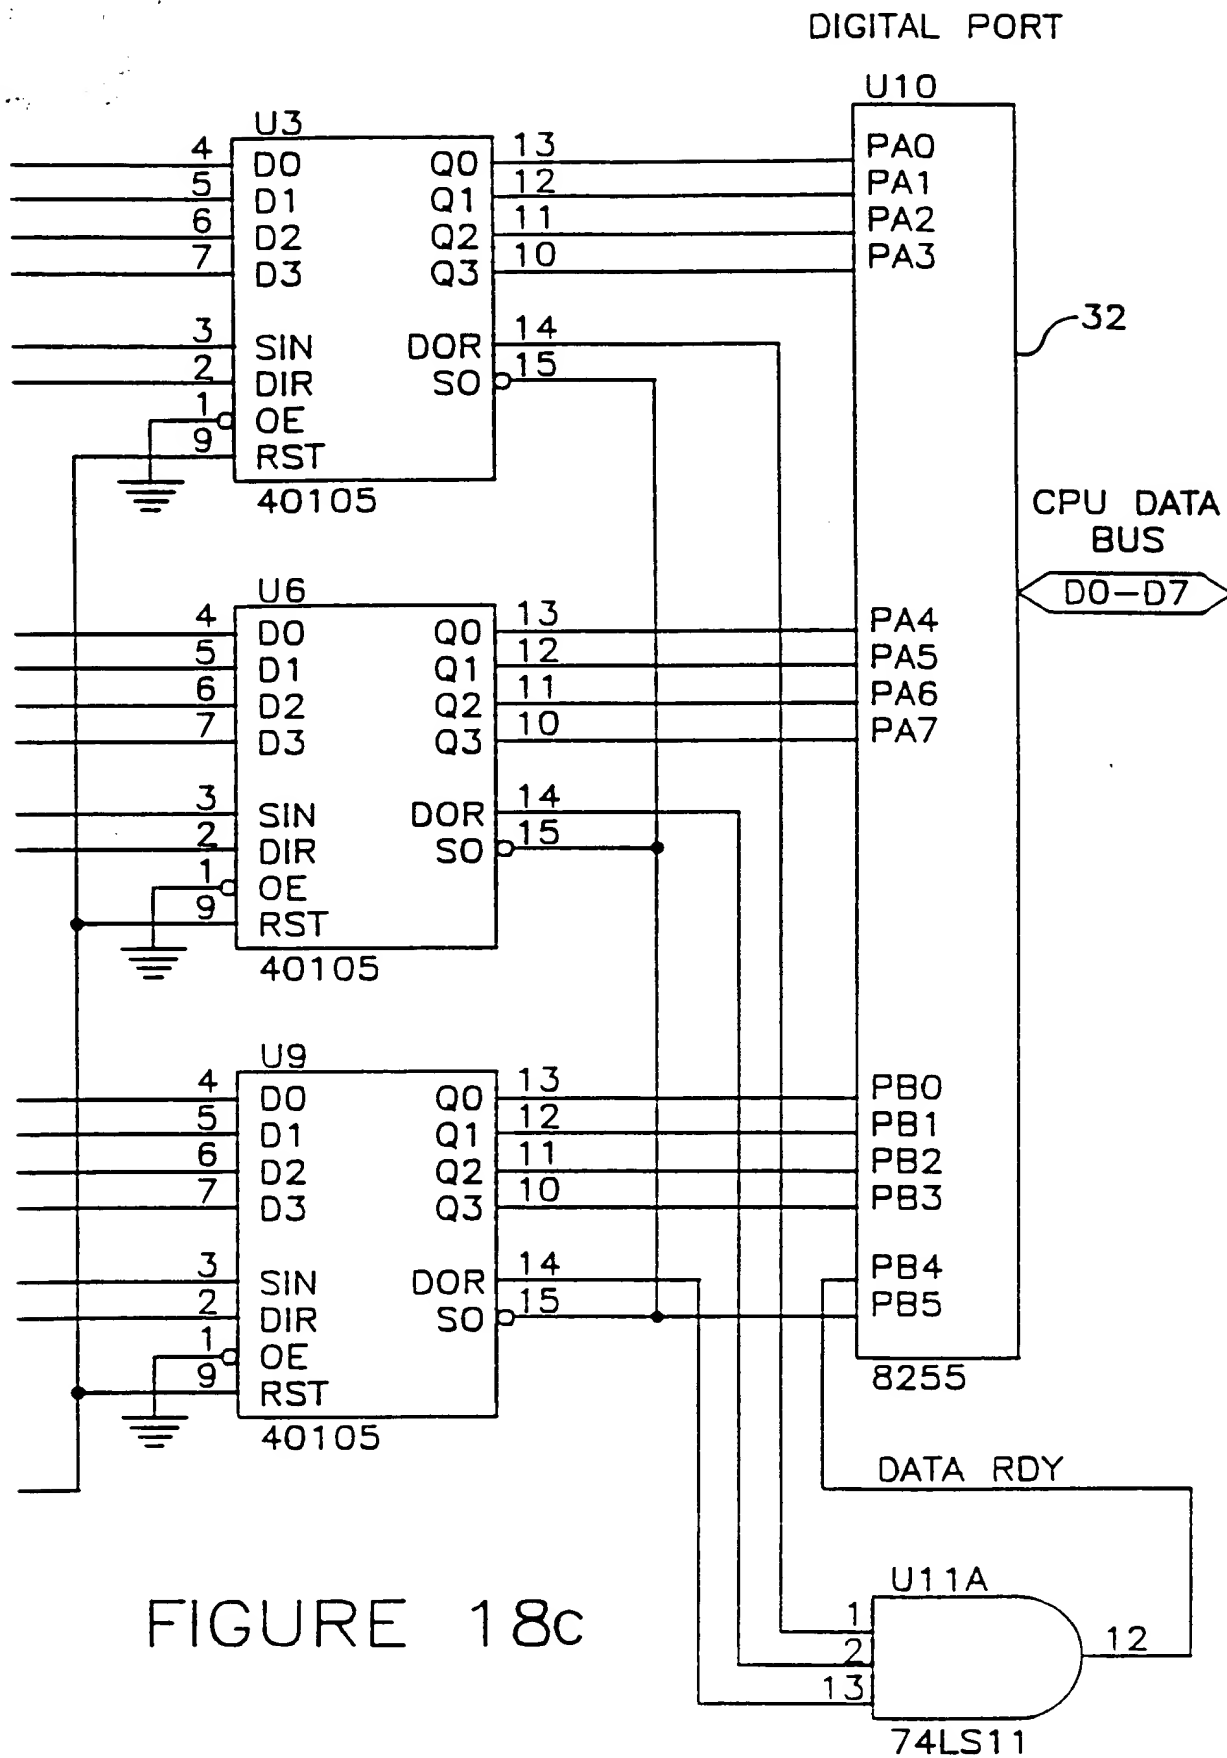 

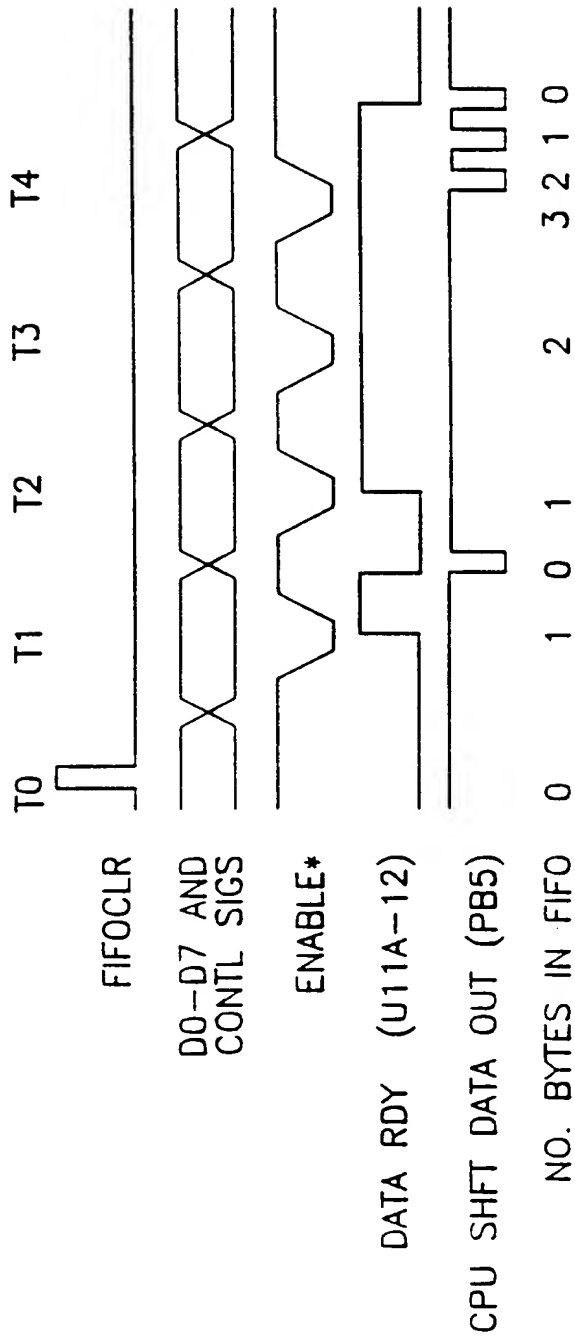

FIFO MEMORY ARRAY TIMING DIAGRAM

FIGURE 18d

09902066-100901

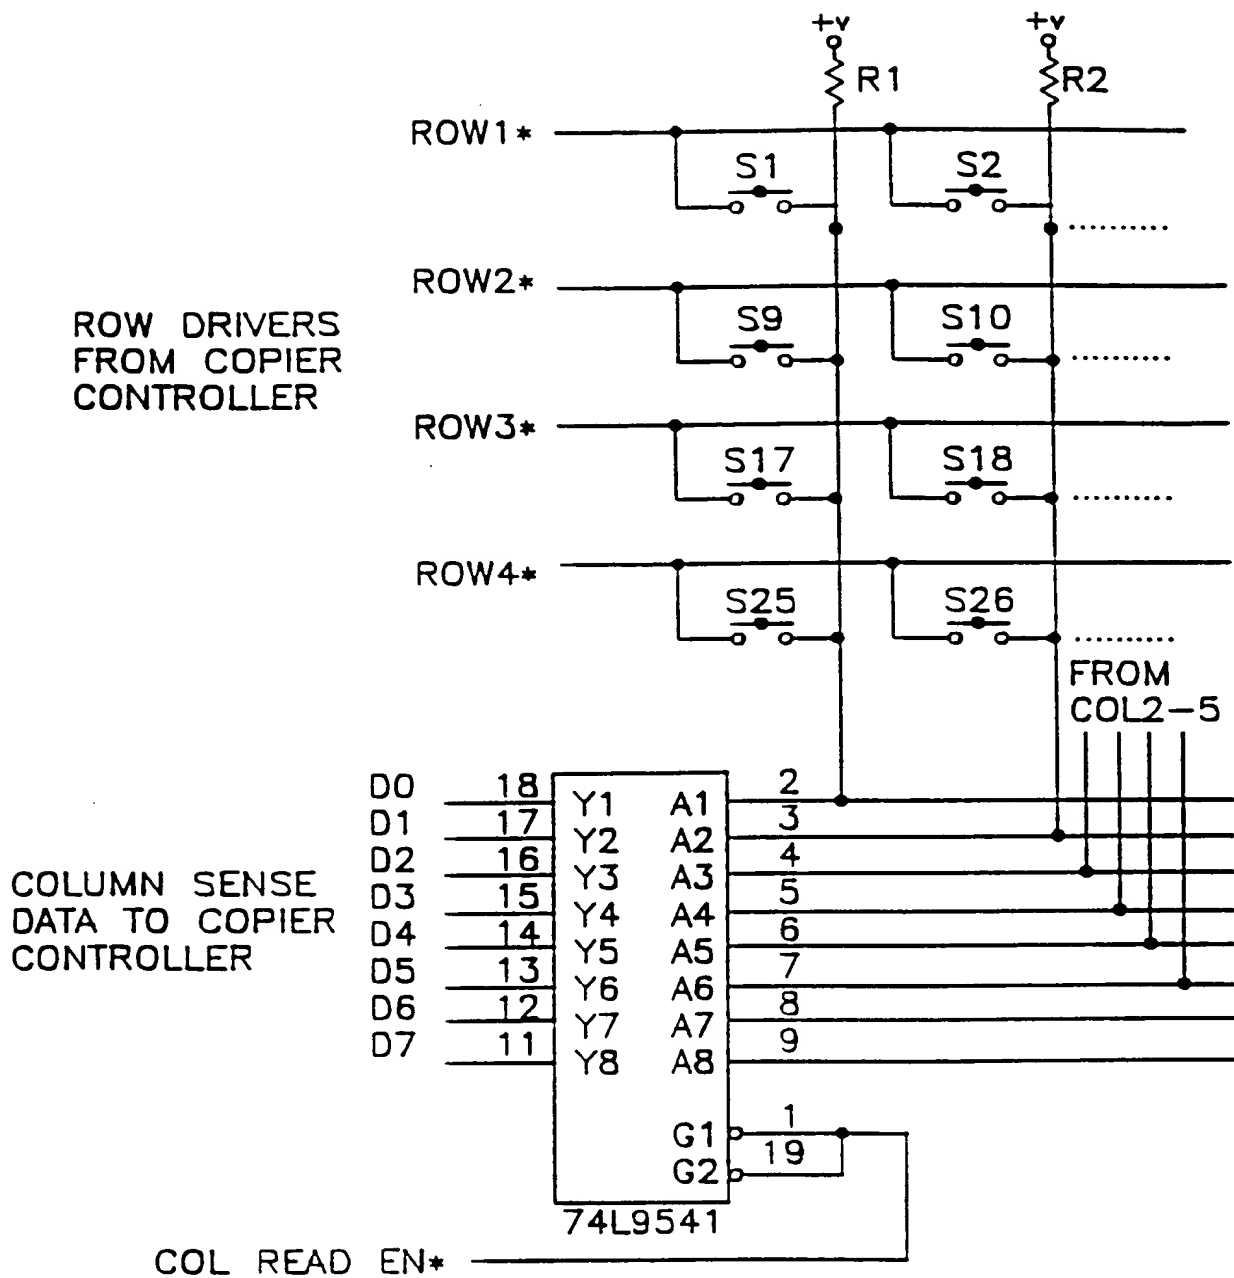 


FIGURE 19a

COPIER MULTIPLEXED KEYBOARD WITH
REMOTE KEYSTROKE MONITORING AND
REMOTE KEYSTROKE GENERATOR CIRCUITRY

09902066-100901


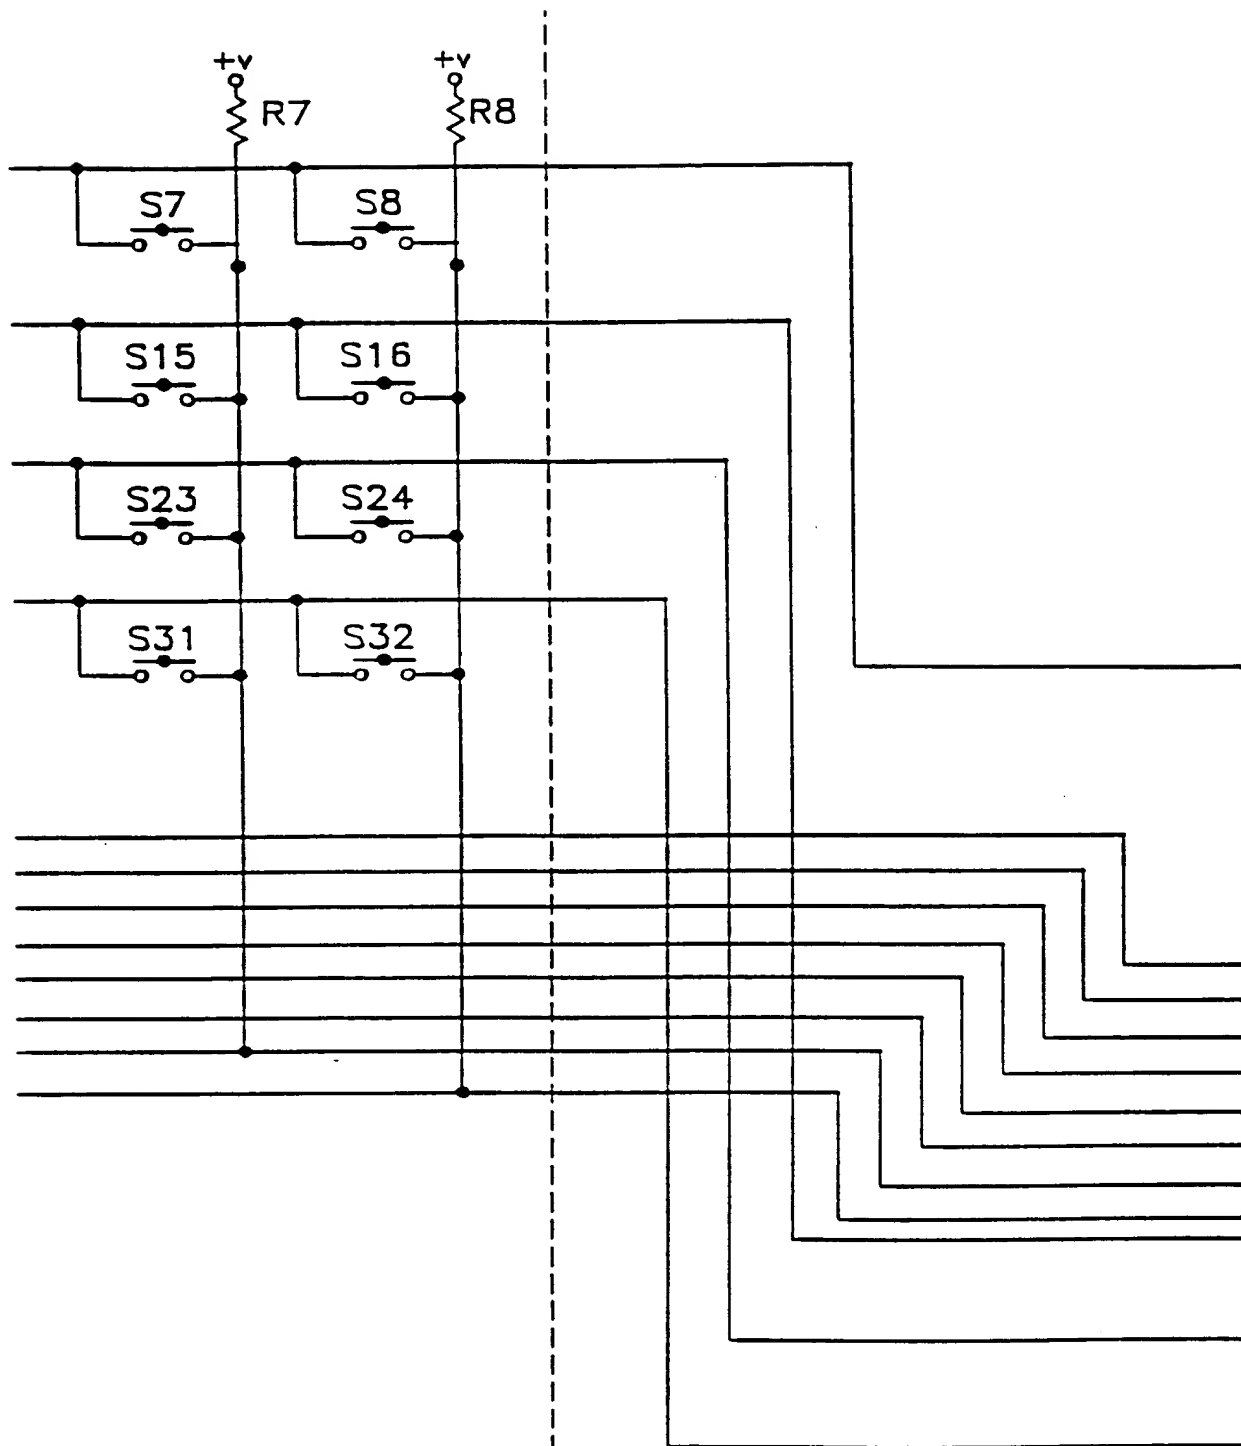 


FIGURE 19b


← COPIER CONTROL PANEL

→ SMART DATA TAP

 0902065-100904

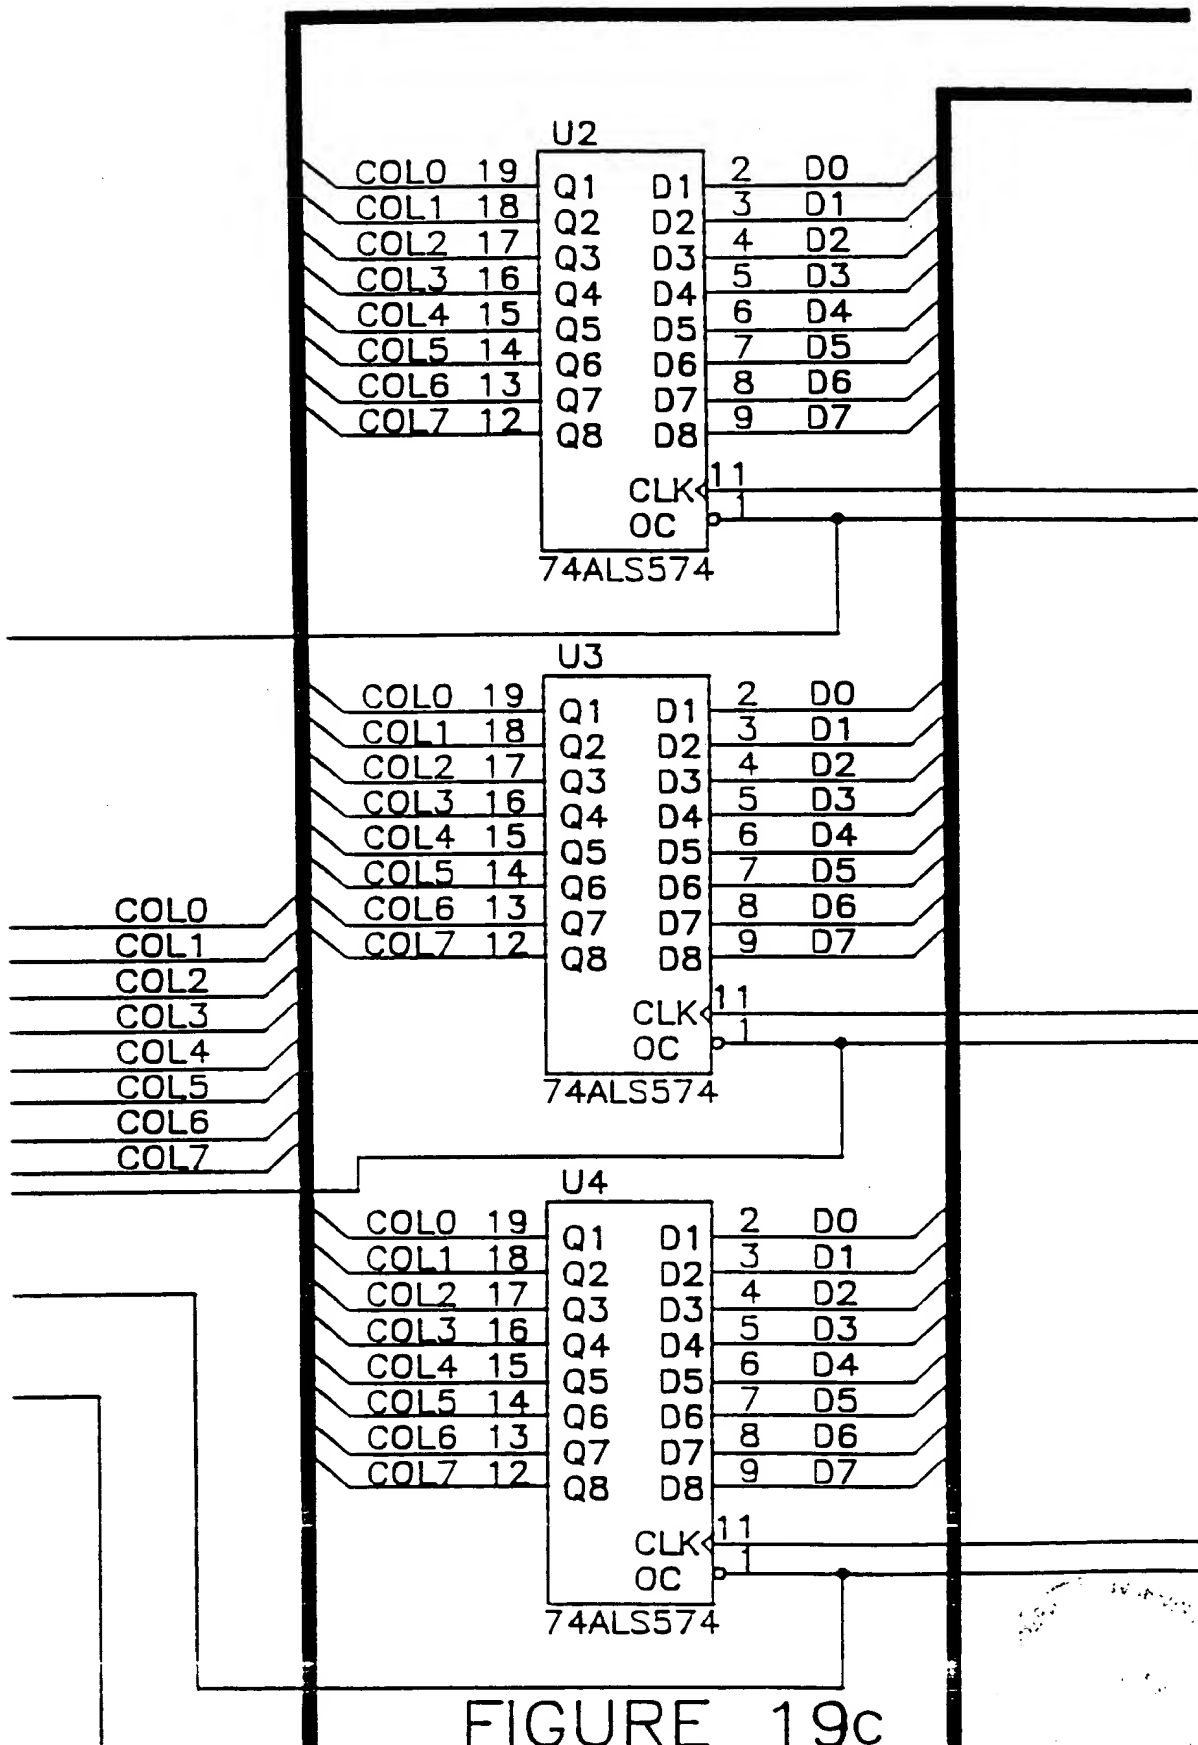

FD600T-9902060

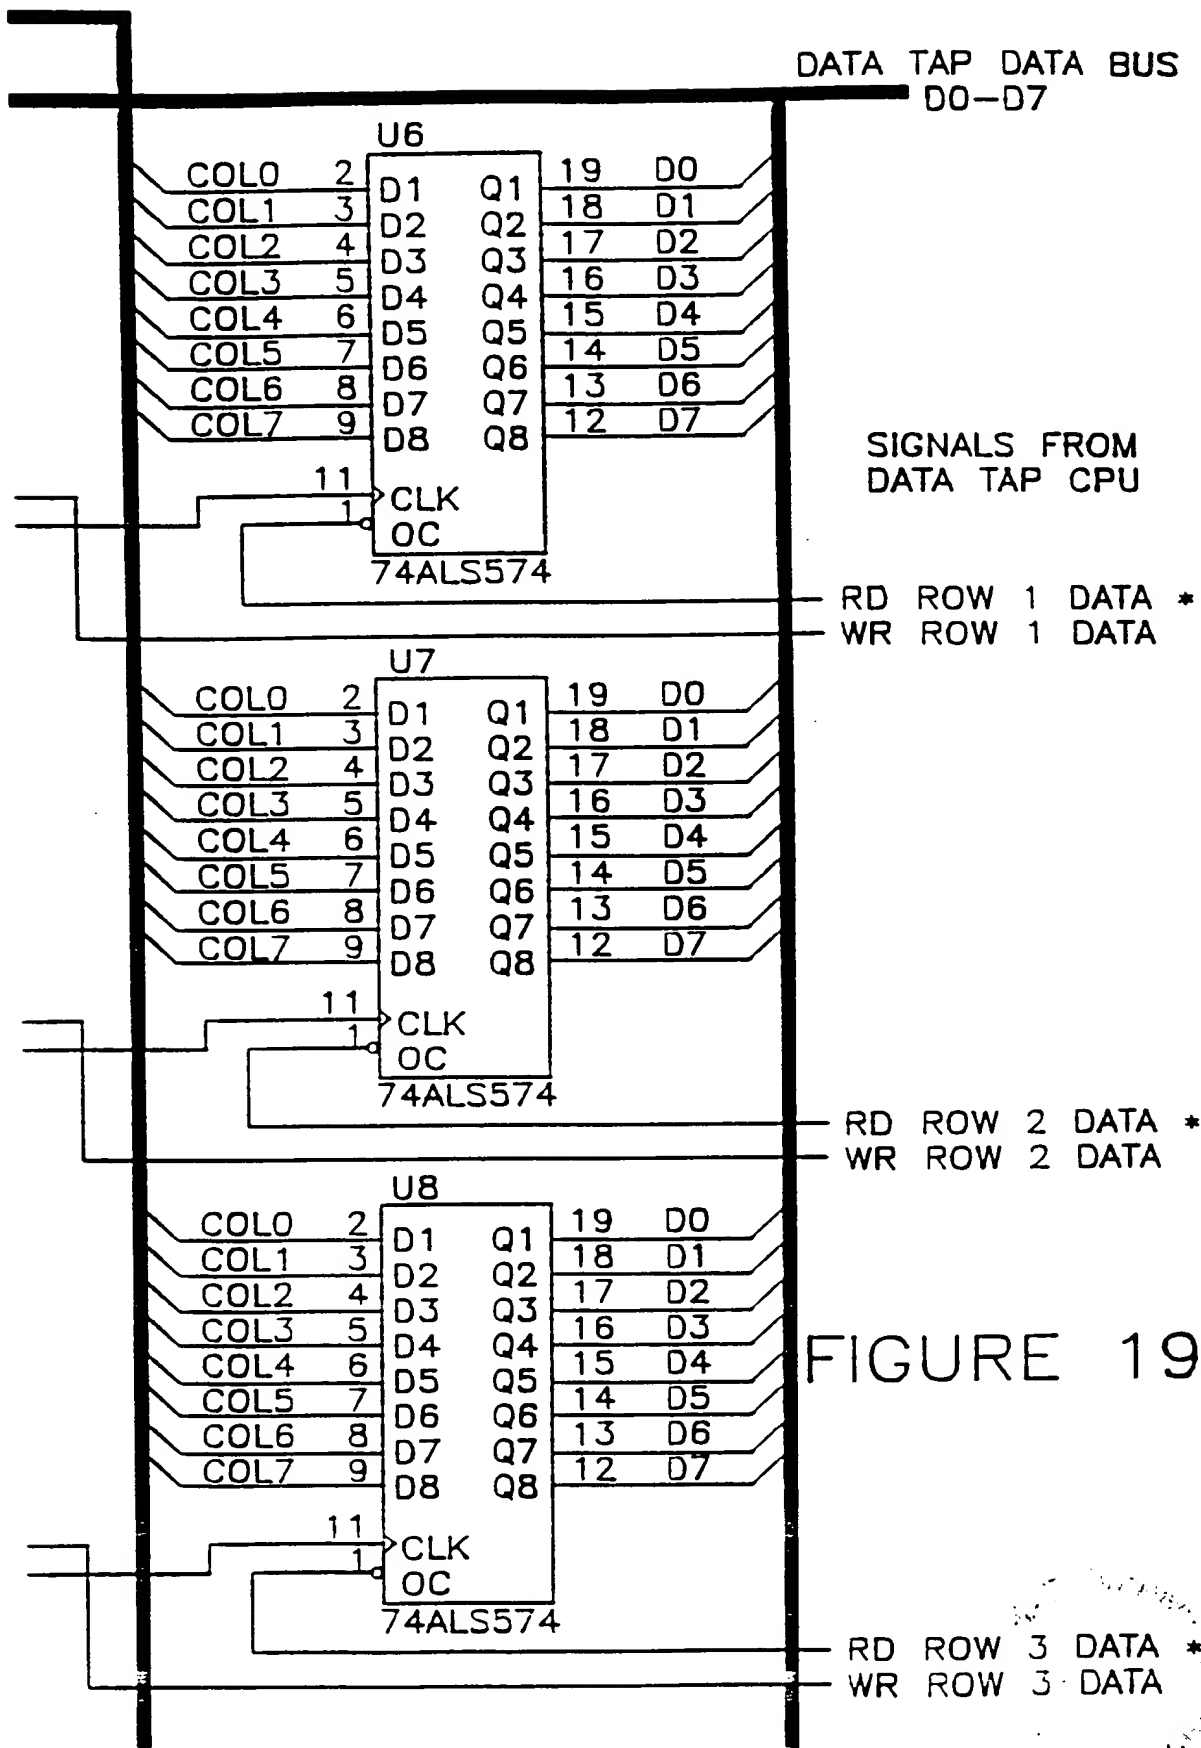 

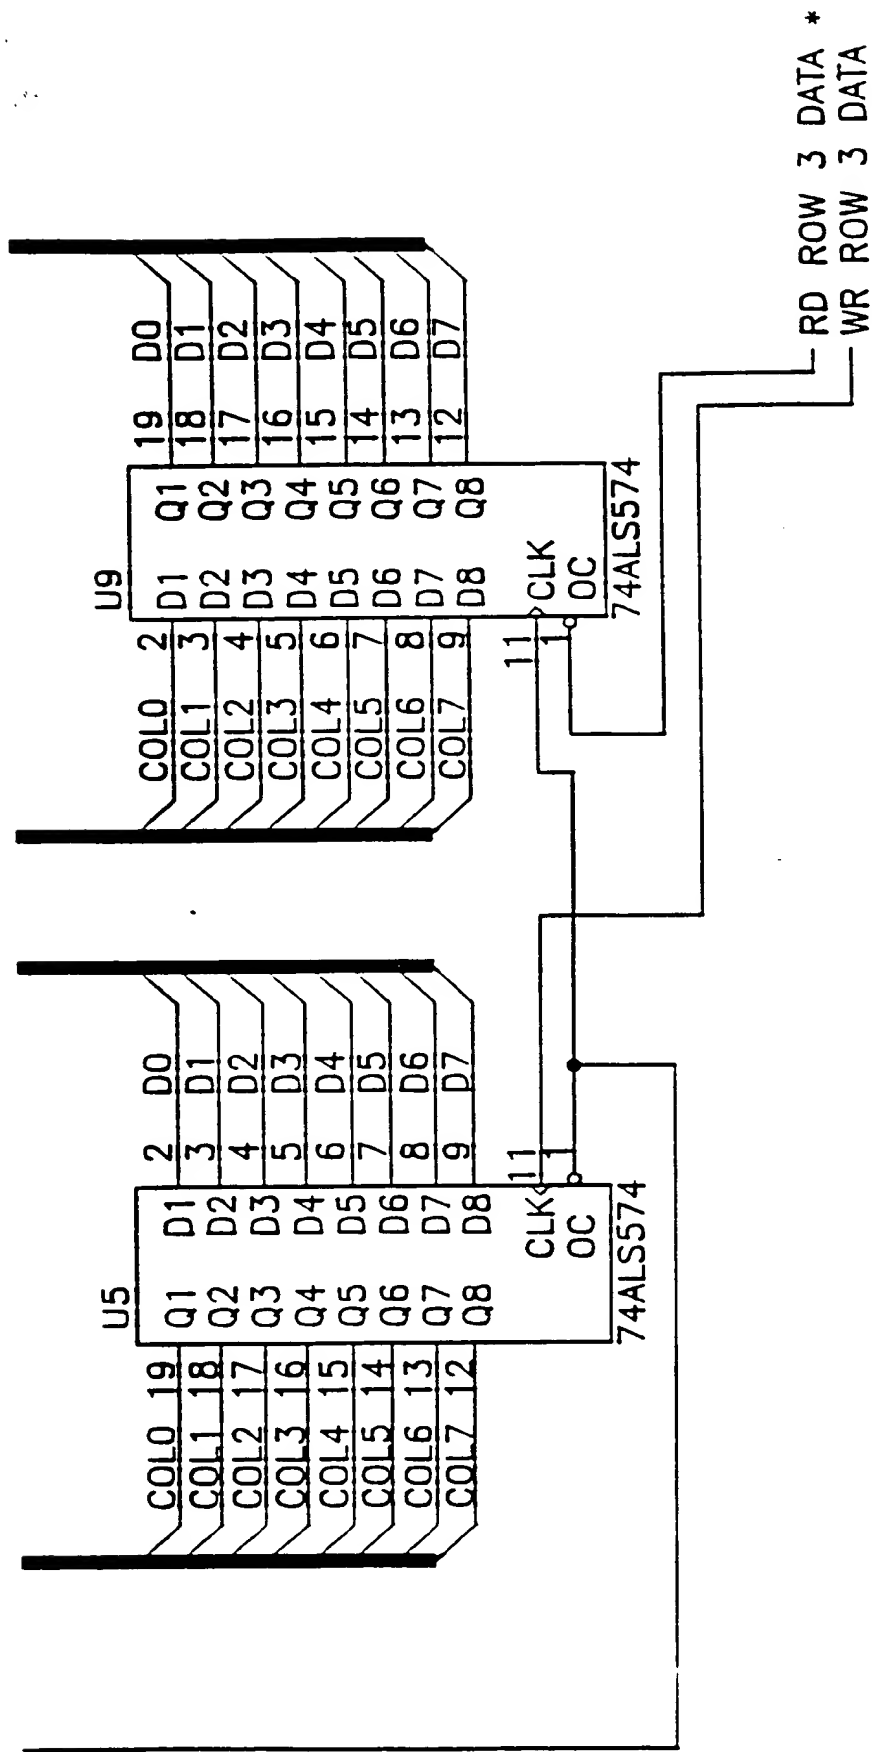 


FIGURE 19e

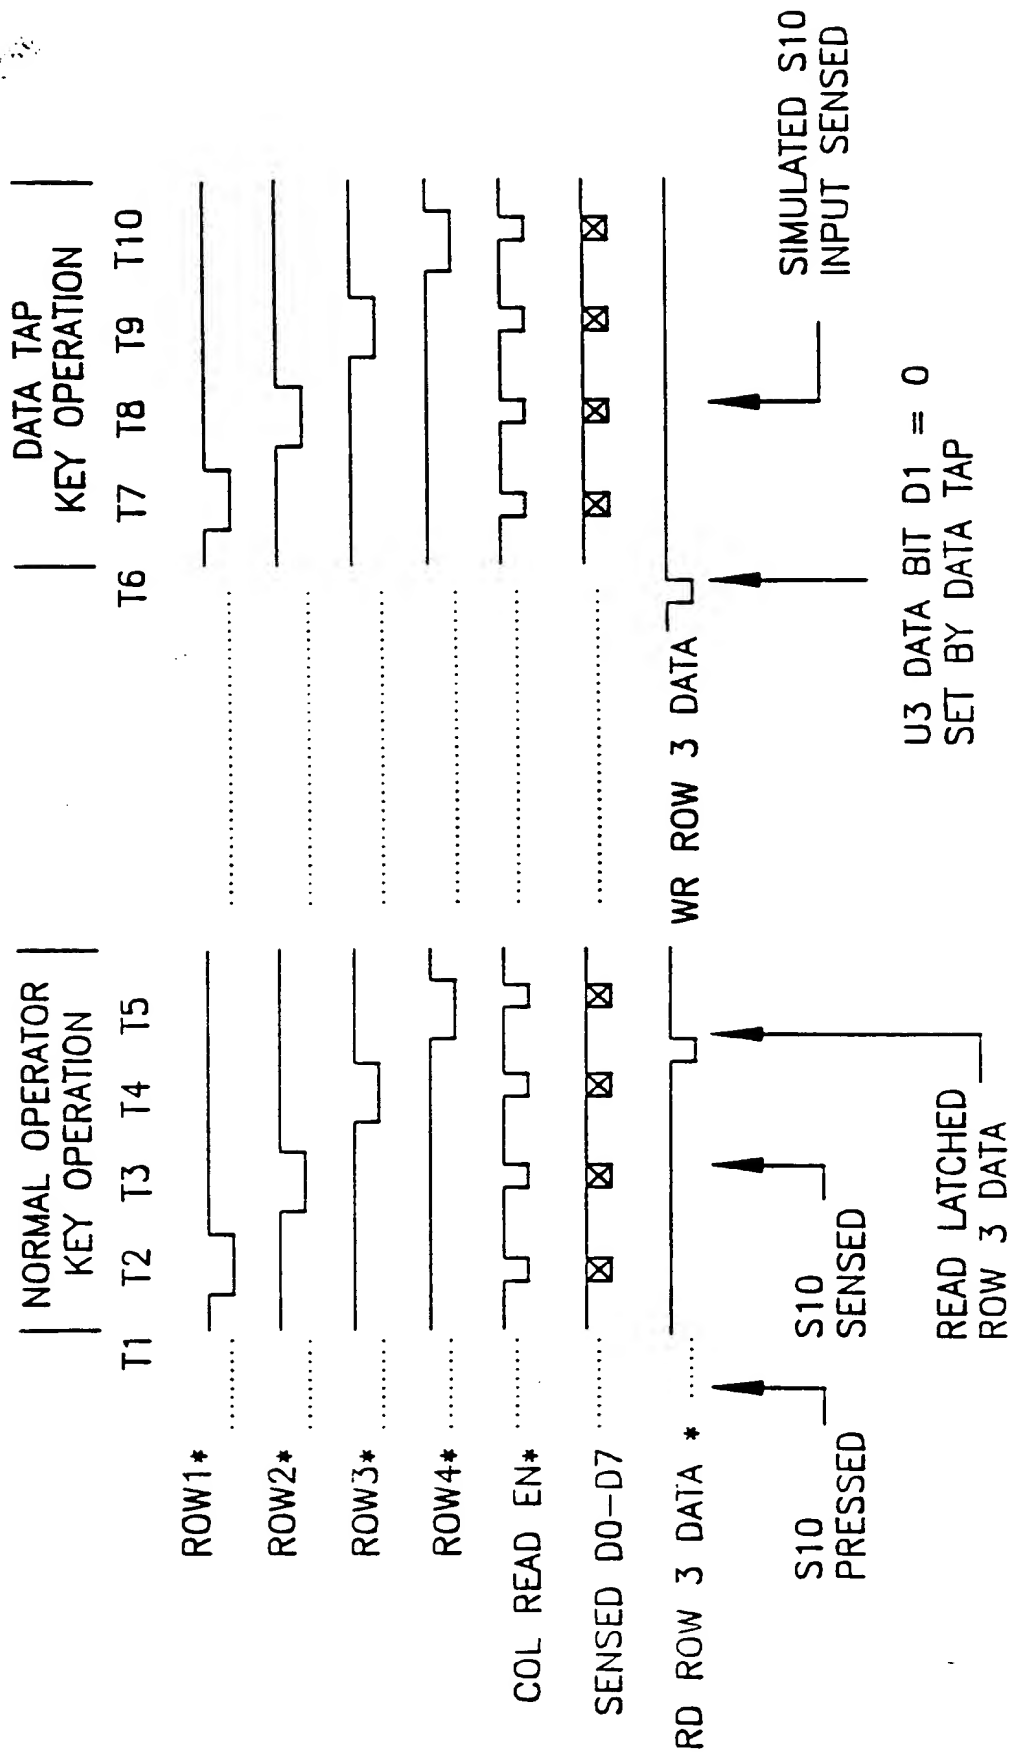 


FIGURE 19f

MULTIPLYED KEYBOARD TIMING DIAGRAM

DISPLAY TRADENAME AND HIGHLEVEL
PICTURE OF OVERALL MONITORING
STATUS. DISPLAY FAULT COPIERS
BY CLASS: KEY OPERATOR, TECHNICIAN
SERVICE AND OFF-LINE.

ESC: MENU MODE TOGGLE

MAIN
MENU

USER
MENU

GATEWAY TO INFORMATION
OF ALL COPIERS

COPIERS

DISPLAY LIST OF ALL COPIERS
AND PHYSICAL LOCATIONS

SEE FIGURE 20b

GATEWAY TO COPIER
SERVICE RECORDS

SERVICE


DISPLAY LIST OF ALL COPIERS
AND SERVICE RELATED FORMS FOR
SELECTED COPIER.

SEE FIGURE 20c

FIGURE 20a

FUNCTION KEYS AVAILABLE AT EACH LEVEL

 F1: ON-LINE HELP MESSAGES
ESC: BACKUP ONE MENU LEVEL

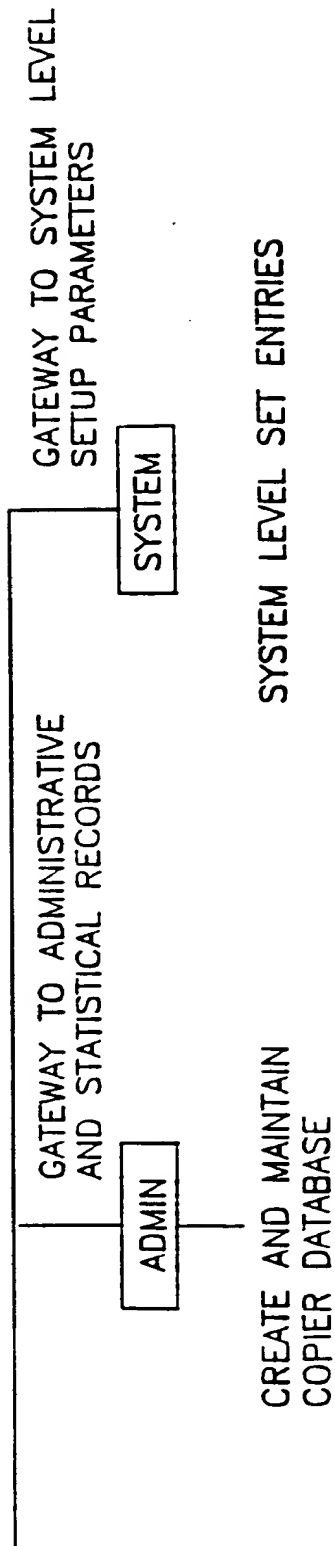

SEE FIGURE 20d

SEE FIGURE 20e

FIGURE 20b

FROM FIGURE 20a

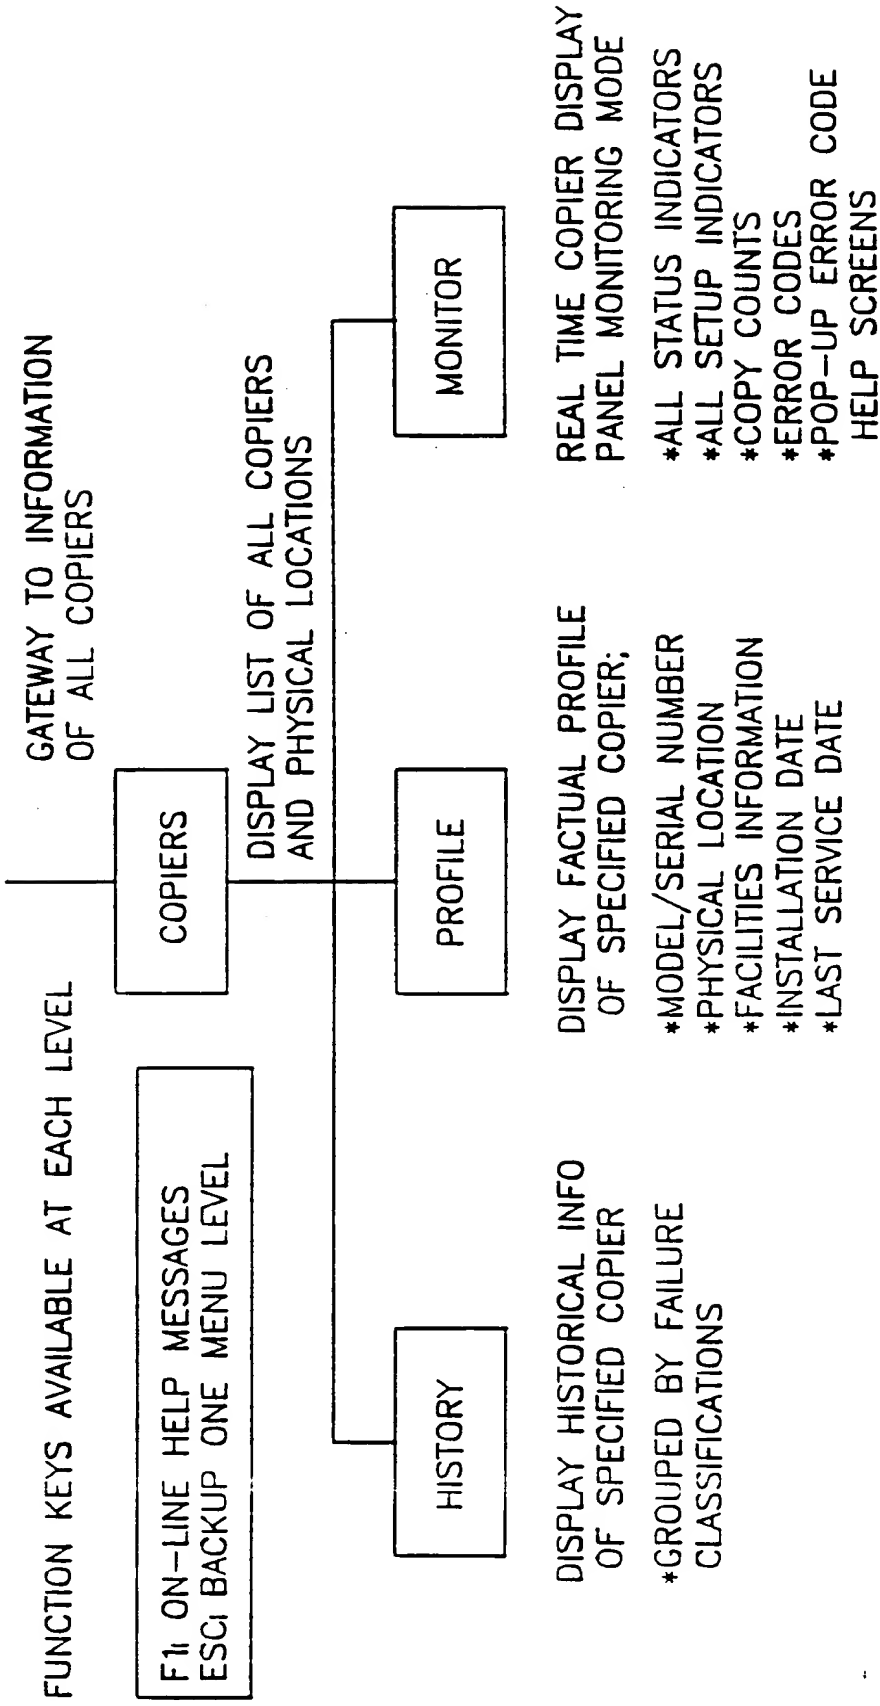 


FIGURE 20c

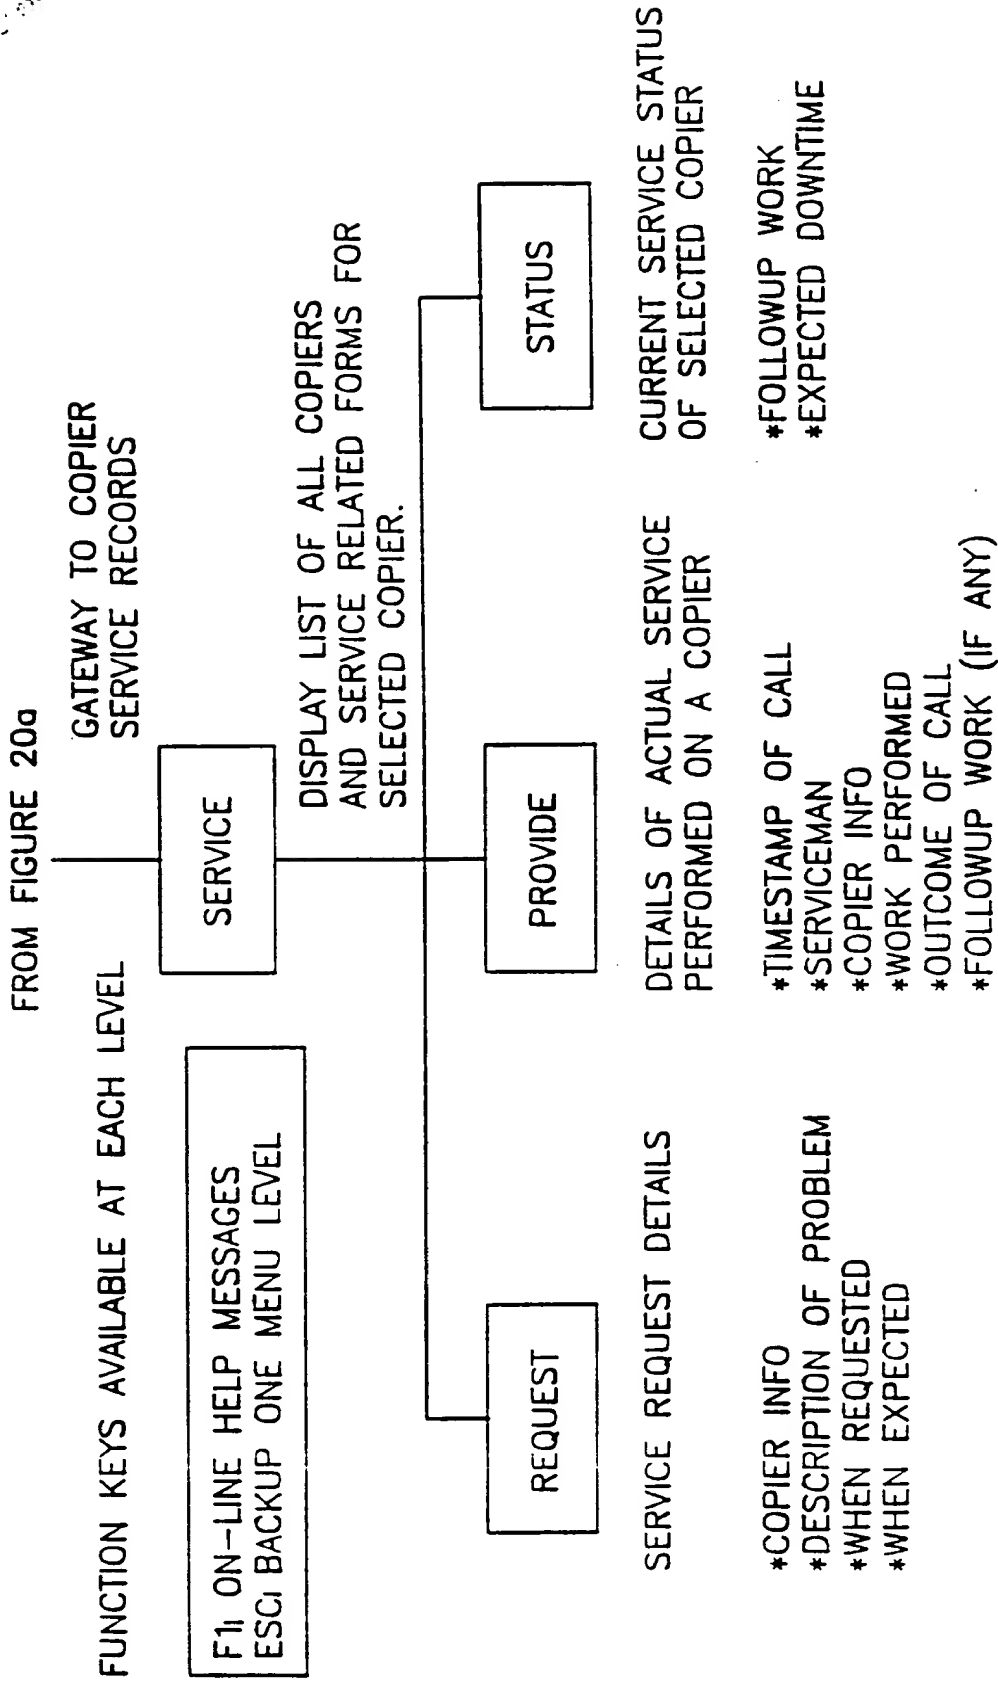 


FIGURE 20d

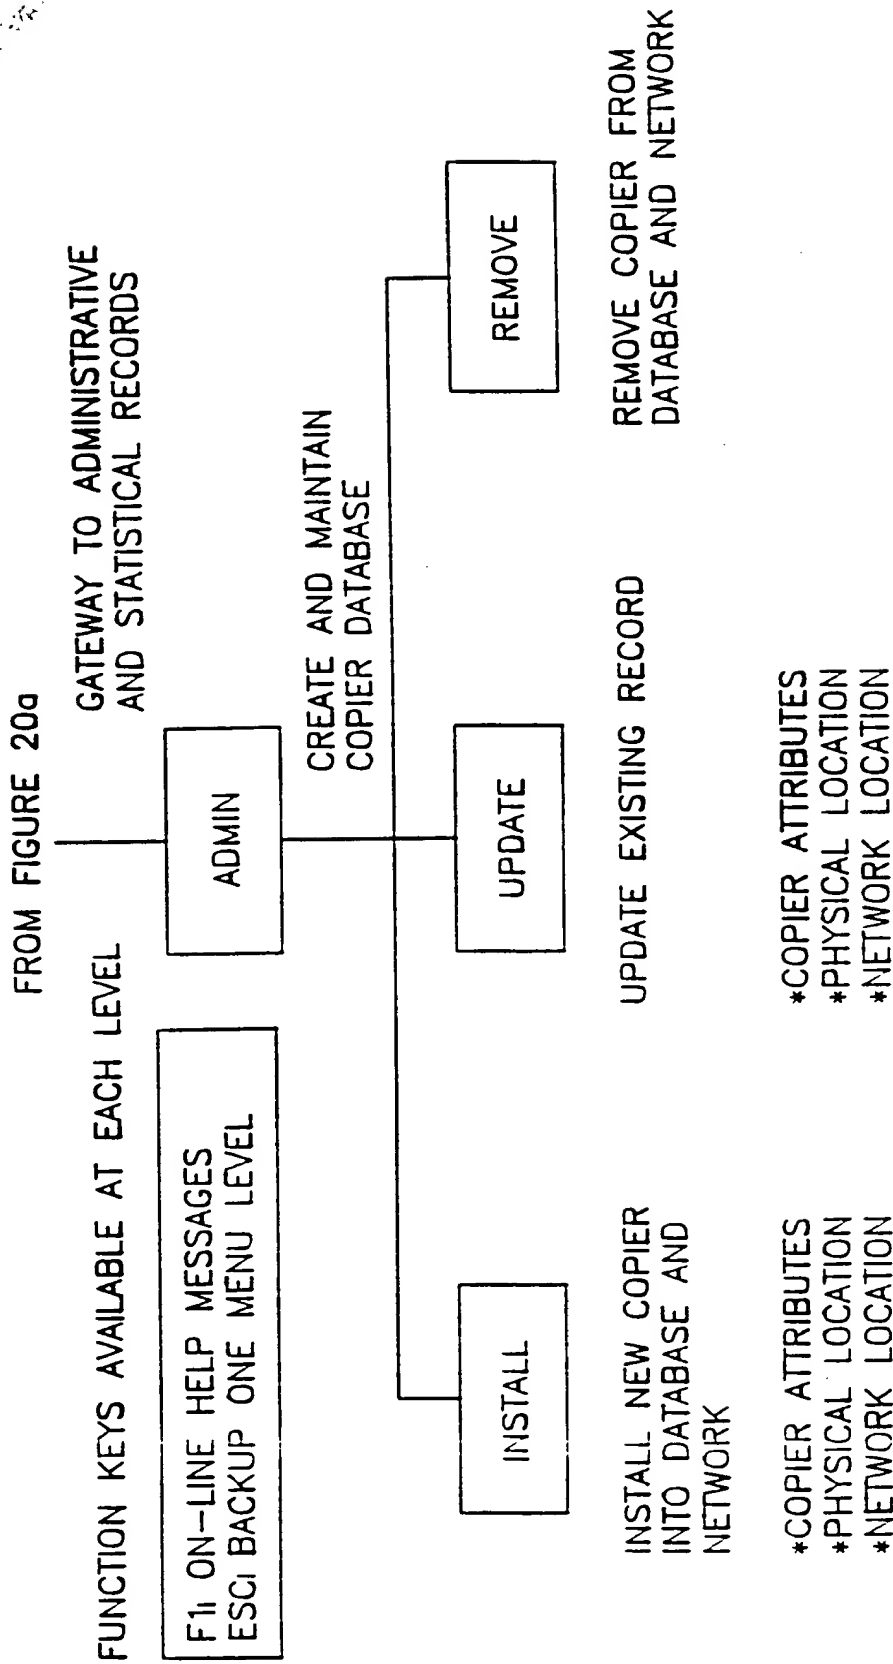 


FIGURE 20e

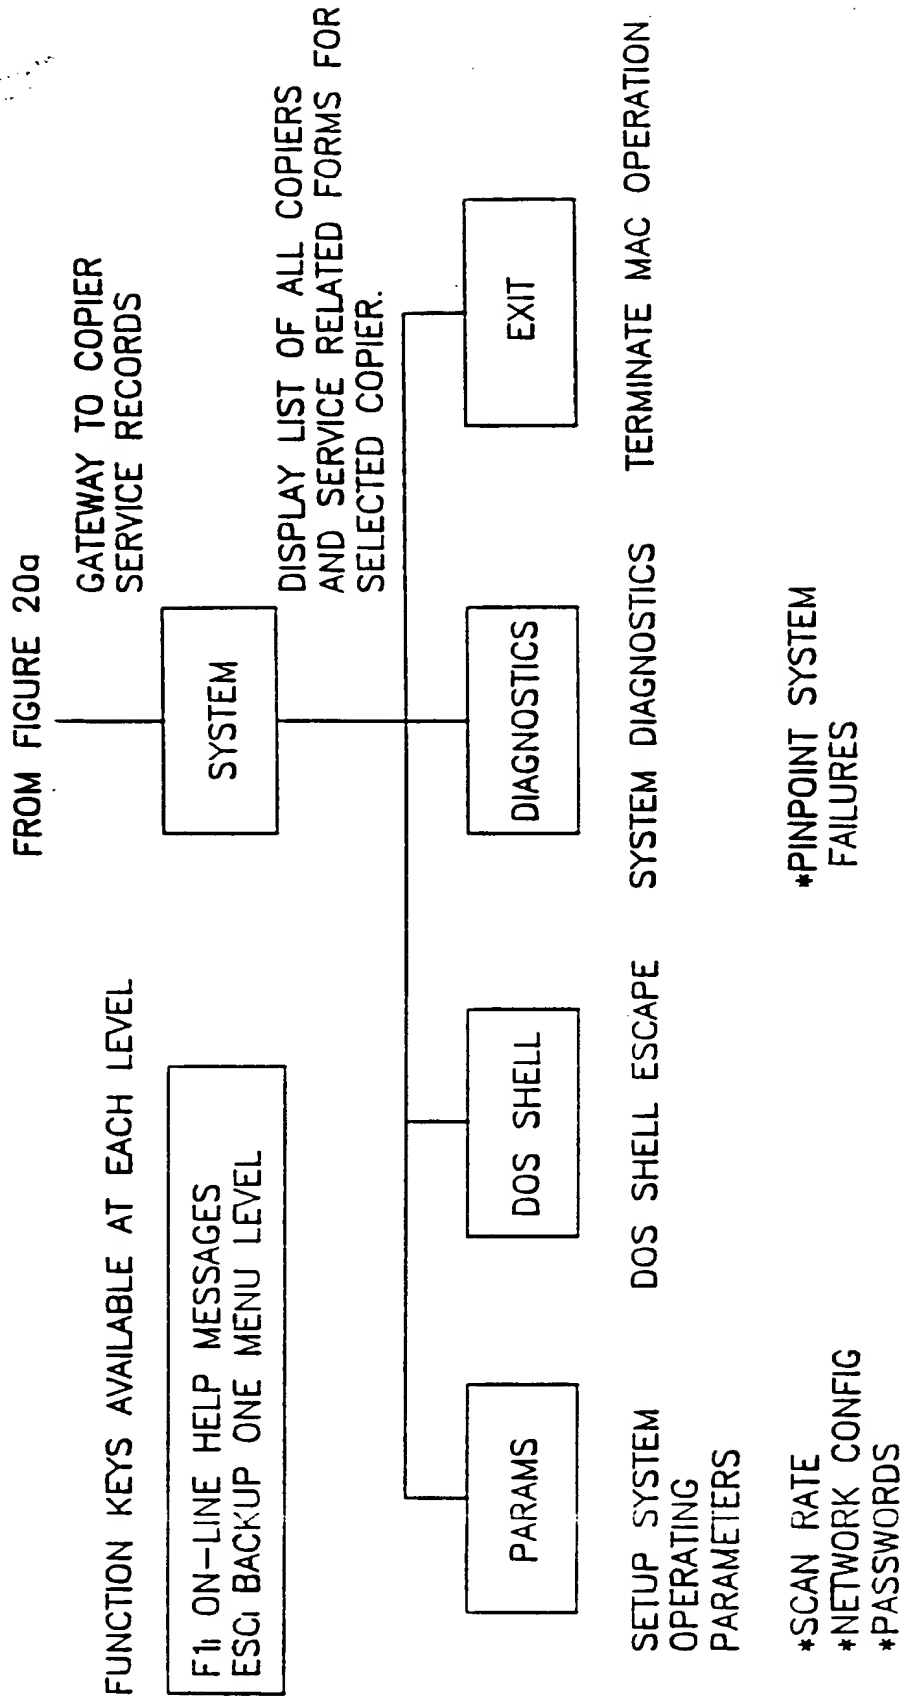 


FIGURE 20f



MONITOR

ID: 001
TYPES: X-1025
LOCATION: LAB
STATUS: OFFLINE

CLEAR PAPER PATH ADD DRY INK INSERT PAPER TRAY PLEASE WAIT CHECK PAPER SIZE

ADD PAPER REPLACE SUMP JOB INTERRUPT READY TO COPY CHECK SORTER

NUMBER TO COPY: 00 ORIGINAL SIZE: TRAY #0
CONTRAST: NORMAL COPY PAPER SIZE: 000
PERCENT:

1-HELP ESC-EXIT MONITOR

SCREEN 6: MONITOR 1025 COPIER

FIGURE 21

MONITOR		ERROR CODES	
ID:			
TYPES:			
LOCATION:			
STATUS:			
CLEAR			
PAPER			
PATH			
ADD			
PAPER			
NUMBER			
CONTRA			
			ay #0
A1	-	CLEAR MISFED ORIGINALS	
A2	-	CLEAR MISFED ORIGINALS	
A6	-	RECOPY LAST ORIGINAL	
A7	-	RECOPY LAST 2 ORIGINAL	
A9	-	DOCUMENT HANDLER FAILURE	
C1	-	REMOVE TRAY 1 - CLEAR MISFED PAPER IN TRAY	
C2	-	REMOVE TRAY 2 - CLEAR MISFED PAPER IN TRAY	
C3	-	REMOVE TRAY 3 - CLEAR MISFED PAPER IN TRAY	
C9	-	REMOVE MISFED COPY PAPER AND REFEED	
E1	-	CLEAR PAPER PATH FROM CENTER	
E3	-	CLEAR PAPER PATH FROM EXIT	
E5	-	CLOSE FRONT COVER	
F1	-	CHECK SORTER PATH	
F5	-	RETURN SORTER TO CLOSED POSITION	
F8	-	SORTER POWER FAILURE	
F9	-	SORTER BIN FAILURE	
J7	-	REPLACE WASTE SUMP	
D6	-	INSERT KEY COUNTER	
Ux	-	CALL FOR SERVICE (U1 - U8)	

1-HELP ESC-EXIT MONITOR

SCREEN 7:

ERROR CODES FOR 1025

FIGURE 22